


# Gri||stream®

## Gourmet 6 Burner Barbecue GOH66SS

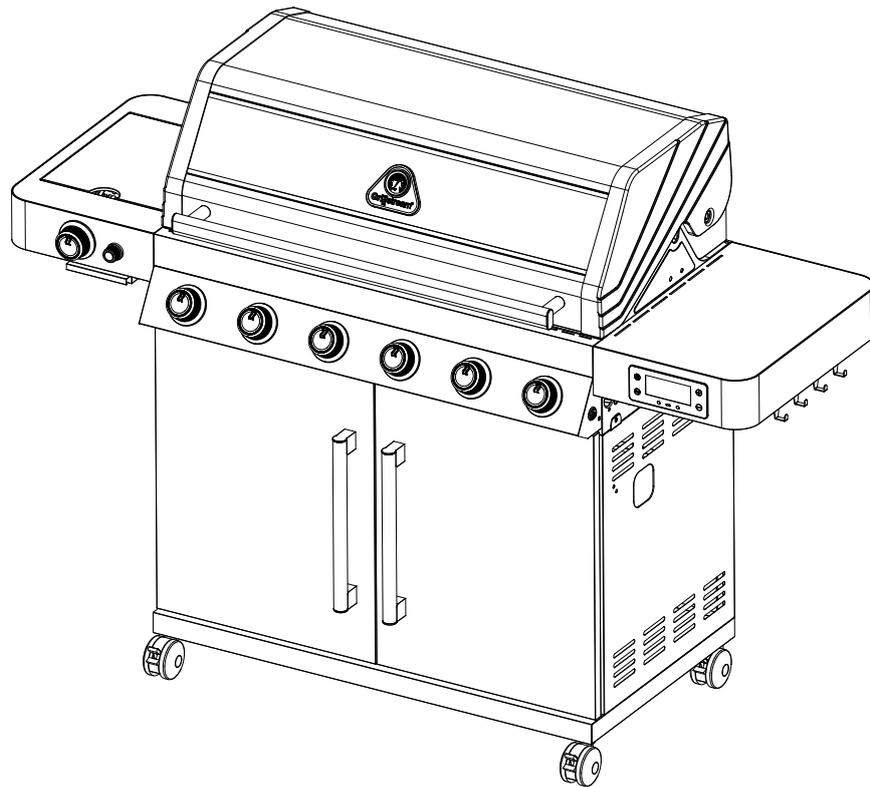

### WARNING! FOR YOUR SAFETY, FOR OUTDOOR USE ONLY

Please read these instructions carefully and ensure that your barbecue is properly installed, assembled, maintained and serviced in accordance with these instructions.

Failure to follow these instructions may result in serious injury and/or damage to property.

#### Necessary Tools



X5  
AA Battery  
(Not included)



Scan me for step by  
step video instructions

Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any components are missing, please contact the retailer from whom you bought this product.

This product takes approximately **60 MINUTES** to assemble with **2 PEOPLE**. The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**. Read this leaflet in full before commencing assembly.



#### Carbon Monoxide Hazard

Using a barbecue inside can kill you, it gives off Carbon Monoxide, which has no odour. Never use a barbecue in enclosed spaces such as a tent, home/building, vehicle or garage.

## Contents

---

Warning Information	Page	3
Location of your BBQ	Page	3
Connecting to the gas cylinder	Page	3
The hose and regulator assembly	Page	3
Testing for leaks	Page	4
Gas cylinder safety	Page	4
What is Propane	Page	4
Are all gas bottle gases the same	Page	4
How is it different from natural gas	Page	4
Lighting your BBQ	Page	5
Using your BBQ	Page	5
Hybrid System	Page	6
Smartgrill Instructions	Page	7
Time to Grill App Instructions	Page	8
Maintenance of your BBQ	Page	12
Troubleshooting	Page	13
Warranty	Page	13
Exploded diagram	Page	14
Parts list	Page	15
Fittings list	Page	16
Assembly instructions	Page	17-38
Leak Test	Page	39


**⚠ WARNING INFORMATION**

- Read this Operating Manual before use.
- Ensure there is adequate clearance away from flammable materials.
- Please do not use in windy conditions as flame efficiency may be affected and could cause excessive heat on the front panel.
- This BBQ is only to be used outdoors.
- Do not allow children to operate the BBQ.
- Accessible parts may be very hot, keep children away. Even after turning off, BBQ will remain hot.
- Any modification of this BBQ may be dangerous.
- Do not move this BBQ during use.
- When you have finished cooking, turn off the gas cylinder before you turn off the BBQ controls to ensure any gas in the pipeline is used up.
- Parts sealed by the manufacturer or their agent must not be manipulated by the user.
- BBQ specifications can be found on the data label attached on the side panel of the BBQ frame.
- Do not store or use petrol or other flammable vapours and liquids near the BBQ.
- Do not store empty or full spare gas cylinders under or near the BBQ.
- Keep the gas hose and any electrical cord away from hot surfaces.
- Ensure that all packaging is removed from within the BBQ before use, including protective films. And all cable ties securing the gas hose to the underside of the BBQ are removed too.
- Avoid unnecessary twisting of the gas hose.
- Visually inspect hose prior to each use for cuts, cracks, excessive wear or other damage.
- The hose must be replaced if damaged and when National Conditions require it.
- Never light the BBQ with the hood or lid closed.
- Never lean over the cooking surface whilst lighting the BBQ.
- Use BBQ tools with heat proof handles or good quality insulated oven mitts when operating BBQ.
- Never alter or modify the regulator or gas supply assembly.

**LOCATION OF YOUR BBQ**

IMPORTANT - BBQS MUST BE INSTALLED IN ACCORDANCE WITH THE MANUFACTURER'S INSTALLATION INSTRUCTIONS, LOCAL GAS FITTING REGULATIONS AND MUNICIPAL BUILDING CODES.


Think carefully when deciding on a location where you are to use your BBQ. The BBQ must not be installed under or on any combustible material and must be a level surface. Minimum clearance from any combustible materials on ALL sides is 430mm (18"). Minimum clearance from any combustible material from the TOP of the BBQ is 1000mm (39"). (Fig. 1)

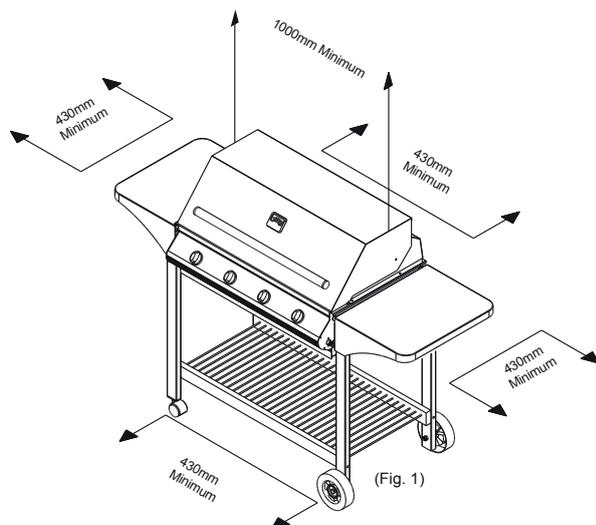

- Not to be used in garages, porches, breezeways, sheds, or other enclosed areas
- Not to be used on recreational vehicles
- Do not obstruct flow of combustion and ventilation air around the BBQ

**CONNECTING THE GAS CYLINDER**

There are two different types of gas that can be used on your gas BBQ depending on where you live, that being either butane or propane gas. Both are supplied in gas cylinders. The connection between the gas cylinder and the BBQ is made with a regulator. (Fig. 2)

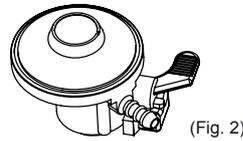

It is important that you use the correct regulator for the particular type of gas you purchase. See your local gas dealer for information on purchasing the correct regulator. Never operate this BBQ without a gas regulator.

The following gas supply pressures are a guide only:

For (DK) (FI) (NO) (NL) (SE) (HR) (SI) (IS) (EE) (LV)

Butane - 30 millibars } 1 3 B/P (30)  
 Propane - 30 millibars }

For (GB) (IE) (BE) (FR) (GR) (IT) (ES) (LU) (PT) (CH) (CZ)

Butane - 28 millibars } 1 3 + (28 - 30/37)  
 Propane - 37 millibars }

For (DE) (AT)

Butane - 50 millibars } 1 3 B/P (50)  
 Propane - 50 millibars }

FOR AUSTRALIA  
 Propane - 2.75 kPa  
 Universal LPG - 2.75 kPa

GRILLSTREAM BARBECUES, LEISUREGROW PRODUCTS LTD.		UK CA 0359-24		CE 2575-24	
Product name	Outdoor gas Grill				
Model Number	K1065BQG2DS				
Gas Category	I <sub>1,2,3,4,5,6,7,8</sub> <input checked="" type="checkbox"/>		I <sub>9,10,11,12</sub> <input type="checkbox"/>		I <sub>13,14,15</sub> <input type="checkbox"/>
Gas and Supply Pressure	Butane(G30) 28-30 mbar	Propane(G31) 37 mbar	Butane 29 mbar	Butane 37 mbar	Butane 50 mbar
Country of Destination	I <sub>1,2,3,4,5,6,7,8</sub> : BE,CH,CY,CZ,ES,FR,GB,GR,IE,IT,LT,LU,LV,PT,SK,SI, I <sub>9,10,11,12</sub> : CY,CZ,DK,EE,FI,FR,HU,LT,IT,NO,NL,SE,SI,SK,RO,HR,TR,BG,IS,LU,MT, I <sub>13,14,15</sub> : AT,CH,CZ,DE,SK, I <sub>16,17,18</sub> : PL				
Main Burner Injector Size	Ø 0.92 mm	Ø 0.92 mm	Ø 0.86 mm	Ø 0.81 mm	
Side Burner Injector Size	Ø 0.92 mm	Ø 0.92 mm	Ø 0.86 mm	Ø 0.81 mm	
Total Nominal Heat Inputs (Hs)	24.5kW(1781g/h)				
Electric energy(W/DC)	4X1.5V-LED lamp/App Thermometer; 1X1.5V- Infrared Side Burner Ignition				
Serial Number					
Use Outdoors Only .					
Read the instructions before using the appliance.					
Warning : Accessible parts may be very hot. Keep young children away.					
Made in China					


**THE HOSE AND REGULATOR ASSEMBLY**

- Must be suitable for liquefied petroleum gas (LPG)
- Must withstand the above pressures
- Must not exceed 1000mm (39") in length
- The BBQ is supplied with a quick release hose that is suitable for direct connection of a suitable regulator
- Before connecting inspect the hose, its fittings and rubber seals. If there is any sign of cracking, splitting or wear, have the hose replaced
- While in use, keep the hose unobstructed and free of kinks and twisting

## SECURING THE HOSE AND REGULATOR ASSEMBLY

### Quick release connection (Fig. 4)

- The BBQ's manifold connection is a quick release connector
- Gently pull back the movable section on the manifold, insert hose and release. Reverse the process to remove.
- Check connection is secure and test for a gas leak before using.

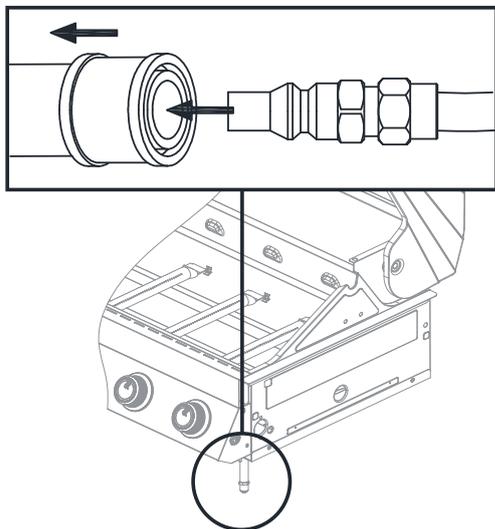

### Quick release connection (Fig. 4)

- The BBQ's manifold connection is a quick release connector
- Gently pull back the movable section on the manifold, insert the hose and release. Reverse the process to remove.
- Check connection is secure and test for a gas leak before using.

## TESTING FOR LEAKS - DO THIS BEFORE USING YOUR BBQ

**NOTE - DO NOT test for gas leaks with an open flame. If you smell gas, turn off at the source.**

- Before first use and periodically during the season, or whenever a gas cylinder is changed, you must check for gas leaks.

### Do so by:

- Turn on the gas cylinder
- Turn all gas valves on the BBQ to the • **off** position
- Brush a soap solution of one part liquid detergent and one part water to all gas connections
- The presence of bubbles indicates a leak. Tighten or repair as necessary
- Under no circumstances should a naked flame be used to check for leaks
- If a gas odour is present and no leaks can be found, do not use the BBQ. Turn the gas off at the source, disconnect the hose and immediately contact your BBQ dealer or place of purchase for assistance.

Further illustration of this is available in the "testing your BBQ" section of this manual and also in your Time to Grill user manual included with your BBQ. For our video tutorial please scan this QR code to access.



## GAS CYLINDER SAFETY

- Always change over a gas cylinder away from any possible source of ignition in a well ventilated area
- Do not smoke whilst handling gas cylinders
- Never store gas cylinder indoors
- Store away from direct heat in a well ventilated area
- The gas cylinder is position on a flat surface
- Always keep the gas cylinder in an upright position
- Close cylinder valve when BBQ is not in use and, if available, use a sealing plug to prevent possible leaks
- Do not subject gas cylinder to excessive heat
- Do not tamper with any fitting attached to any gas cylinder. Have it taken to the manufacturer or an authorized testing station
- When the cylinder runs out of gas, have it refilled or swapped at an authorized testing station. They will fill the cylinder to no more than 80% of its capacity. This allows the gas to expand with temperatures
- Have the cylinder inspected EVERY 10 YEARS at an authorized testing station.

## WHAT IS PROPANE

It is a fuel gas compressed until it turns to liquid, then stored in a bottle or cylinder under pressure for easy transport.

## ARE ALL GAS BOTTLE GASES THE SAME?

No. The LPG that cars use is known as auto LPG. It is different to propane/butane, which is used in household gas appliances. This guide only deals with propane/butane.

## HOW IS IT DIFFERENT FROM NATURAL GAS?

Propane and butane are similar to natural gas. They are colorless, non-poisonous and do not pollute when burnt. There is one important difference, propane and butane are heavier than air, if they escape they don't float away. The gas collects and forms gas pools at ground level or at the bottom of your appliance.


## LIGHTING YOUR BBQ

### JET FLAME IGNITION SYSTEM

Upon turning any burner control knob you will hear an audible "click". This is known as a Jet Flame Ignition System.

#### Jet Flame Ignition to ALL burners


- Before starting - ALL burner control knobs must be in the • **off** position
- Flat lids and roasting hoods must be OPEN before lighting
- Turn on the gas cylinder
- Push in and turn **Any Knob** in an anti-clockwise direction to the **hi** position or until a click is heard. This will trigger a spark to light the burner.
- If burner does not light immediately, turn the gas control knob to the • **off** position and wait five minutes for any accumulated gas to clear out of the BBQ before repeating procedure.

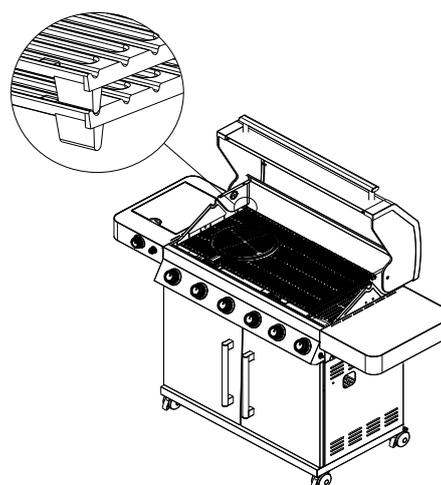

### LIGHTING YOUR BBQ (cont.)

- The **lo** position is obtained by turning the knob fully anti-clockwise
- Adjusting the control knob to your heat requirements allows you to control the flame
- If ignition cannot be achieved see section: If BBQ fails to operate properly

**IMPORTANT** - It is important that all control valves, and the gas cylinder are turned off after use.

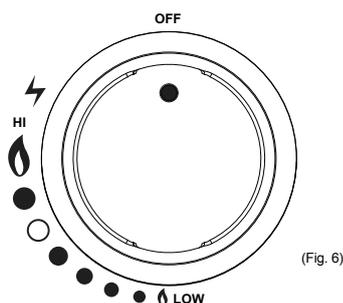

## USING YOUR BBQ

### GRILL AND FLAME TAMER PLACEMENT


- The flame tamer should be placed underneath the grill

Order of how things go into the barbecue:

1. Oil channel inserted into front of frame with end of channel going through hole. (Fig 8)
2. Grillstream Grills always go to the left hand sides.
3. Griddles are always on the right.

#### NOTE:

- a. Ensure that your grills incline from front to back to the fat collecting channel at the front of the barbecue.
- b. There may be a slight movement in the grill bars while cooking, this is normal and will not affect the way the Grillstream system works.

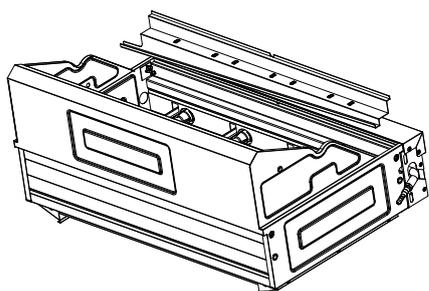

(Fig.8)


Grillstream Grills fit directly on top of each other - do not offset them.

### FIRST TIME USE OF BBQ

- Before using the BBQ for the first time, it should be first wiped with a mild soap and water solution to remove any dust
- Make sure your BBQ is on a solid level surface
- Dry cooking surface and apply a light coating of cooking oil
- Light the barbecue and leave burning for 30 minutes on the **lo** position, with hood up. This is to burn off any residual oils or foreign matter on the grills and hotplates.
- Check burner alignment, for further information, refer to page 8 in troubleshooting.

### FAT COLLECTION

Using the fat collection cup

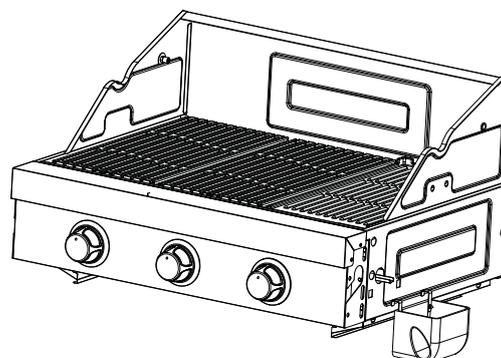

### PREHEATING

Light the burners as previously directed, turn to **hi** and allow the BBQ to preheat for 2-5 minutes ensuring the temperature does not exceed 250°C. Adjust control to desired optimum cooking temperature, the hood must be closed while doing this. **EXCEEDING 250 Degrees CAN DAMAGE THE BBQ AND VOID YOUR WARRANTY**

### PREPARE THE COOKING SURFACE

We suggest setting your barbecue to a low temperature for 30 minutes with the hood down to allow any residue to burn off, and then carefully brushing the grills with oil. this will create a non stick affect and also help prevent any build up of corrosion.

**Note:** The flame tamers disperse the heat from the burners. This results in a uniform heat zone beneath the cooking grill.

### COOKING WITH THE ROASTING HOOD DOWN

When using the BBQ with the hood closed, irrespective of the heat source ( gas or charcoal ), **exceeding 250°C can damage the BBQ and void your warranty.**

### GRILLSTREAM HYBRID SYSTEM


This Grillstream Barbecue comes equipped with the revolutionary Grillstream Hybrid System enabling you to cook with gas, charcoal or both!

#### DIRECTIONS FOR USE - CHARCOAL:

For best results use **Charcoal Briquettes**. We would always recommend using Charcoal Briquettes for a longer, more even heat output. Please note the hybrid system is not designed to be used with lava rock, as lava rock is not an independent heat source like charcoal.

#### STEP 1:

Remove your Grillstream Grills and load the Grillstream Hybrid System Charcoal Trays with charcoal. If using Charcoal Briquettes load a single layer, stood up on end (as illustrated) to allow optimal loading. Place your Grillstream Grills back into position. It is important that the Charcoal Trays are not overloaded with charcoal – if charcoal is in contact with the Grillstream Grills please remove some until there is approximately a 1cm gap between charcoal and grill. Failure to do this could lead to excessive heat and a sub-optimal cooking experience or even damage to your barbecue.

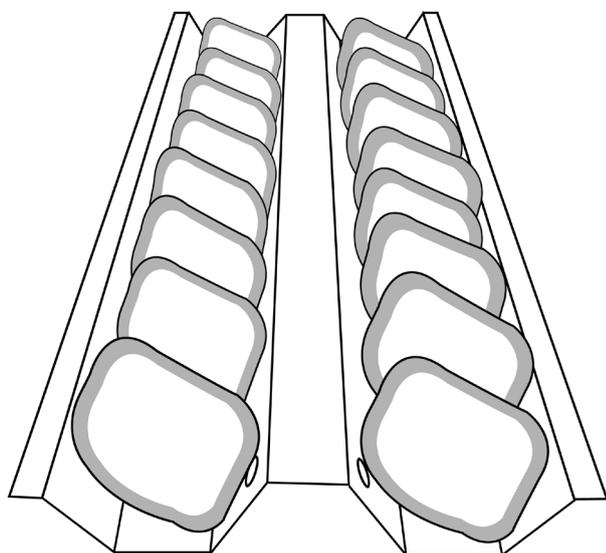

#### STEP 2:

With the Barbecue Hood open, light the burners located below the Charcoal Trays and leave on maximum for 10 minutes. Leave your Barbecue Hood open to aid oxygen flow and accelerate the lighting process. Please note: **DO NOT** use Lighter Fluid, Lighter Gel, Paraffin Cubes or any other type of lighting aid.

#### STEP 3:


Your charcoal should now be lit and making the tell-tale popping and cracking sounds that indicate this. You should now turn off the burners completely and close your Barbecue Hood.

#### STEP 4:


To avoid burning your food it is always recommended that you wait for the charcoal to become coated by a layer of white ash before commencing cooking. This is usually around 20-30 minutes after first lighting the charcoal but this can vary depending on weather

conditions and placement of the Barbecue.

If you have followed the above instructions you will now have at least 1 hour of cooking time before needing to top-up the charcoal or relighting the burners and using the Barbecue as a standard gas model. When adding additional charcoal please be aware the grills will be very hot and require careful removal using the Grill Lifters supplied with this BBQ. We would also recommend using heat-resistant BBQ

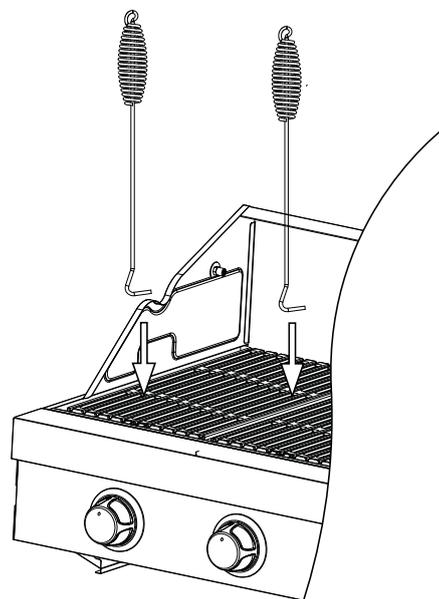

- Hook Grill Lifters at opposite corners of the grill.

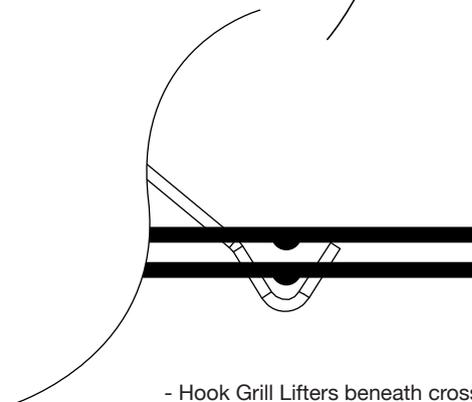


- Hook Grill Lifters beneath cross bar section of both grills.

Gloves (sold separately) when removing the hot grills. Once you have finished cooking and have allowed adequate time for the Barbecue to completely cool down, you should carefully dispose of the Ash that will have collected in the Charcoal Trays and the Grease Tray. This ash should be emptied after every use.

#### DIRECTIONS FOR USE - GAS:

The beauty of the Grillstream Hybrid System is that there is no additional assembly or conversion process required, whether you want to use it as a Charcoal Barbecue or Gas Barbecue. If you have set the Barbecue up, as per the Assembly Instructions, you are ready to cook with Gas. **YOU SHOULD NOT** remove the Grillstream Hybrid System Charcoal Trays as these function as heat diffusers when using Gas, ensuring even heat distribution.

## SMARTGRILL DISPLAY INSTRUCTIONS

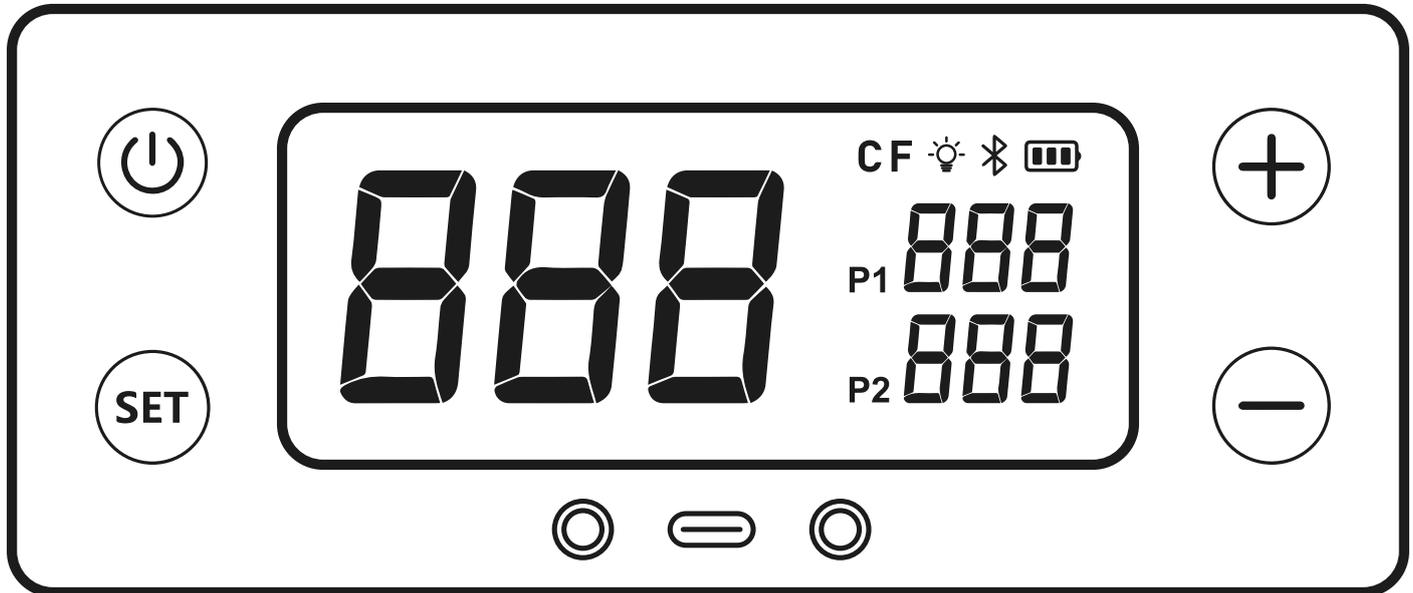

**Power Button**

Press Power Button to turn on and turn off the Smart Grill Display.



**Setup Button**

- Press **SET** button to switch between Probe 1 and 2.
- Hold **SET** button for 2 seconds to switch temperature readouts between °C or °F.



**Temperature Increase Button**

- Press **+** to increase the target temperature of wired probe, each press adds 1°C.
- Hold **+** to increase the target temperature continuously.



**Temperature Decrease Button**

- Press **-** to decrease the target temperature of wired probe, each press adds 1°C.
- Hold **-** to decrease the target temperature continuously.



**Wired Probes Plug**

The Grillstream Smart Grill can handle up to two separate wired temperature probes to gain superior control of your grill for perfect results every time.



**Type-C USB Socket**

The Type-C USB Socket allows you to connect a mobile charging power bank for auxiliary power supply. Please disconnect the battery pack or remove any batteries from it before using this facility.



**Firebox Temperature Display**

This area displays the ambient temperature of your barbecue in real-time. Please note this may display a different reading to your analogue hood thermometer due to their different positions.



**Wired Probe Temperature Display**

This area displays the temperature of each inserted Wired Probe in real-time. Without probe inserted, the display will be shown as “---”.



**Celcius and Fahrenheit Display**

This area displays whether the various temperature displays are in °C or °F. Toggle between the two by holding down the **SET** button for 2 seconds.



**Bluetooth Connection Status**

Bluetooth icon  will flash when not connected to the App, and will be solid after connecting to the App.



**Battery Gauge**

This displays the current battery level. As the battery is depleted the bars will reduce. When battery level reaches minimum the frame will flash to remind you to replace batteries.


## || TIME TO GRILL APP INSTRUCTIONS

### Bluetooth and App Connection

- Search "Time to Grill" in iOS store or Play store to download the App. Alternatively, scan the QR code to the right.
- Once App is installed, turn on the Bluetooth function on your device and turn on the Smart Grill Display on the BBQ.
- Open the App, click the "Add Device" button, the App will search Time to Grill Smart Grills nearby.
- A grill icon will be shown below "Discovering devices" after the smart grill is detected by the App, click the "Add" button.
- Click the blue ⊕ icon to confirm adding the grill.
- There will be a green tick above the grill to indicate the grill is added successfully. Now click "Done" in the top right corner. Note: You can rename the grill on this page using the grey pen icon to the right side of the grill.
- You will now automatically be taken to the main display of the App. Please see usage instructions below for further information.



**Bluetooth range:** in empty flat area without any obstacle, the bluetooth range is 115 feet. and the range will be 10 feet with a wall or other similar obstacle. However, maximum communication range will vary depending on obstacles (person, metal, wall, etc.) or electro-magnetic environment.

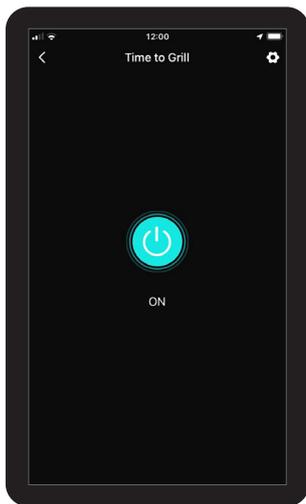

### Step 1: Turn on the Smart Grill

After selecting the Smart Grill on the Homepage menu, if the Smart Grill is not already switched on, press the ⏻ to switch on. The Smart Grill will beep, its display will turn on and the App will switch to the Control Panel.

### Step 2: Control Panel

You are now viewing a real time display of your Barbecue showing the ambient Grill temperature, actual and target temperatures of any probes installed, and the current status of the timer (if set).

Clicking the Grill temperature will display a Temperature curve.

Clicking **P1** 🔪 or **P2** 🔪 will take you to the Probe interface (see next step).

Clicking ⌚ will take you to the Timer interface (see Step 5)





### Step 3: Probe Interface

This is the Probe Interface. You can adjust the target temperature of the selected probe (displayed at the top) manually by moving the slider.

Alternatively you can set the target temperature by clicking an item in the menu (see next step).

Real time probe temperature is displayed in the bottom right corner.





### Step 4: Probe Temperature Menu

Tapping on any of the menu icons on the previous step will open up a related temperature menu of options.

Select the preferred cooking method from Rare to Well done by tapping on the relevant circle and then pressing Start.

Depending on the menu item selected there may be fewer options.

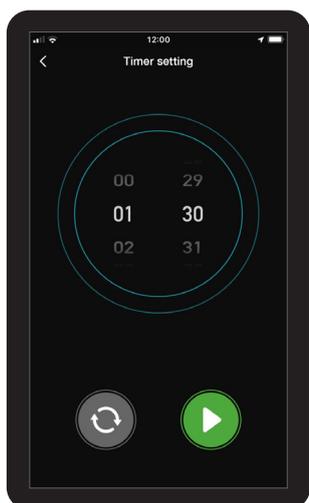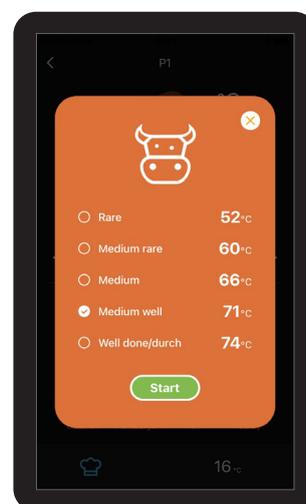

### Step 5: Timer Interface

The Timer Interface allows you to set a timer between 1 minute and 23 hours 59 minutes.

Set the hours by spinning the dial on the left. Set the minutes by spinning the dial on the right.



Click the  to start the timer. Click the  to reset the timer.

You can now exit this page without affecting the timer function.

## Step 6: Timer Expired

Once the set time has elapsed the Timer expired icon will appear. Click **OK** to return to the App.

If the Time to Grill App is not currently displaying on your screen you will still receive a notification if you have allowed the App permission to do so in your phone settings.

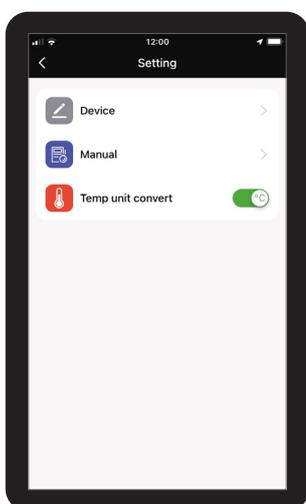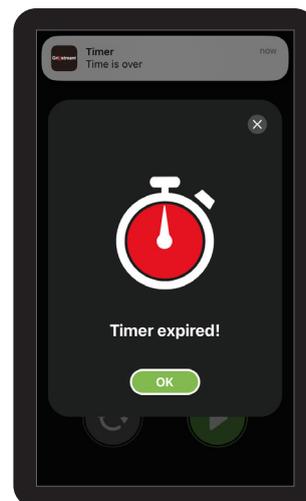

## Step 7: Settings Menu

Tapping the from the Control Panel will take you to the Settings menu.

From here you can access detailed information about your Smart Grill by clicking the **“Device”** option. You can also use this option to unlink the Smart Grill from your phone, allowing you to link it to a different one.


Here is also where you can switch the temperature units between °C and °F by moving the slider next to **“Temp unit convert”**.

## Step 8: Smart Grill Disconnection

If the Smart Grill becomes disconnected from the Time to Grill App you will see this alert pop up.

Please follow the advice for why this may have happened and how to rectify it.

Clicking **“Homepage”** will take you back to the homepage and allow you to re select the device from the main menu.

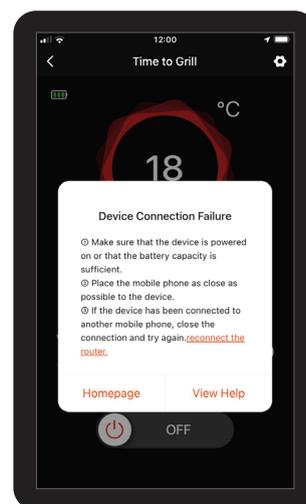

## || TIME TO GRILL APP AT A GLANCE



### 1. Firebox Temperature Indicator

You can monitor the real-time fire box temperature in Firebox Temperature Indicator. This temperature data is not adjustable by the App or Smart Grill Display.

### 2. Generate temperature curve

The App will keep monitoring the firebox temperature and generate the temperature curve, click Firebox Temperature Indicator on the screen to view the temperature curve. You can go back to the previous page by clicking the return icon "<" on the upper left corner.

### 3. Meat Probe Temperature Indicator

You can monitor the wired probe temperature and setup target temperature for two wired probes in Wired Probes Indicator. Click P1 or P2 indicator area to setup the target temperature. There will be a beep from the phone to remind you when the target temperature is reached.

### 4. Battery Capacity Indicator

You can monitor the battery capacity indicator. When the battery icon is flashing without any bars, please replace the batteries or connect to an auxiliary power supply.

**MAINTENANCE OF YOUR BBQ**

**PROTECTION**

Keep your BBQ beneath a weather cover and out of the rain. Proper care and maintenance will keep your BBQ in top operating condition and prolong its life.

**CLEANING THE COOKING SURFACES**

Allow your BBQ to continue burning for 5 minutes after cooking has ceased, which will burn off excess fats and juices etc. that may block the flame ports of the burners. To keep your BBQ ready for the next time, turn the burners to **off** then take a long handled brush and brush the cooking surface to remove excess oils and food scraps. Be careful as surfaces are hot. Protect your hands by using an oven mitt to hold the brush.

Allow to cool before washing in a warm soapy solution. Ensure that any dried fat/food deposits are cleaned off both the top and bottom grills after EVERY cooking session to allow fat to stream away efficiently on your next cooking session. To clean the Grills effectively use the Grillstream cleaning brush which has been specially designed to quickly and effectively clean your Grillstream Grills. Rinse off with clean water and dry before returning to BBQ.

**CLEANING THE FLAME TAMERS**

Periodically wash in a warm soapy solution. Use a wire brush to remove stubborn burnt on cooking residue if necessary. Dry thoroughly before re-installing to the BBQ body.

**CLEANING THE BBQ BODY**

The body of the BBQ should be cleaned regularly dependant on the use and type of food cooked. Use warm soapy solution.

**CLEANING THE DRIP TRAY/FAT COLLECTION CUP**

- **IMPORTANT** - the drip tray, Fat Channel and fat collector should be cleaned on a regular basis. If this is ignored, a build up of fats and greases may cause a fire in the BBQ
- Please check the level of waste fat in the fat collection cup regularly while cooking to ensure it does not overflow and dispose of the waste fat responsibly.
- More frequent cleaning may be necessary as usage demands

**- FAT FIRES ARE NOT COVERED BY WARRANTY**

**CLEANING THE BURNERS**

Occasionally after long cooking sessions, excess fats, juices and marinades can clog the burners. If so, remove the burners (see removing burners section) for cleaning.

- Clean by washing in hot water and detergent
- Ensure that all burner ports are free from obstruction
- Rinse in water
- Light immediately to prevent rust and corrosion
- Brush lightly with cooking oil if BBQ is not used for an extended period


**FIRST USE AFTER LONG PERIODS**

*At the start of each BBQ season or before using after a long period of time:*


- Read this operation manual again thoroughly
- Check all gas valve orifices, burner tubes and connections for obstructions
- Check that all burners are in their correct positions
- Check to see if the gas cylinder is full
- Check for gas leaks using a soapy water solution
- Set burner controls to **off** and connect gas supply
- Ensure all grills and hotplates are clean before use

**REMOVING BURNERS** - Necessary care to be undertaken


- Make sure the BBQ has been switched off and has completely cooled down
- Ensure all gas control knobs are set to the off position and the gas cylinder has been turned off
- Lift the grill or hotplate off the BBQ

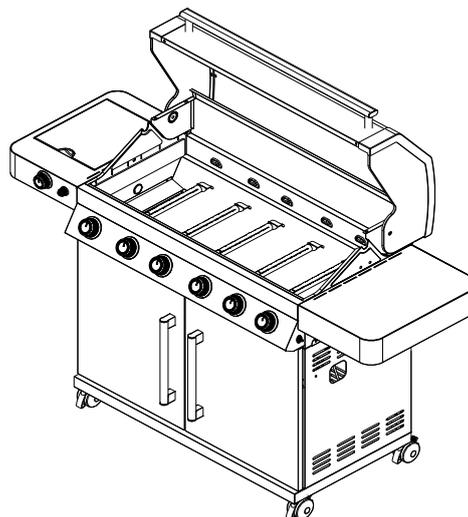

- Remove clip at rear of burner to release the burner

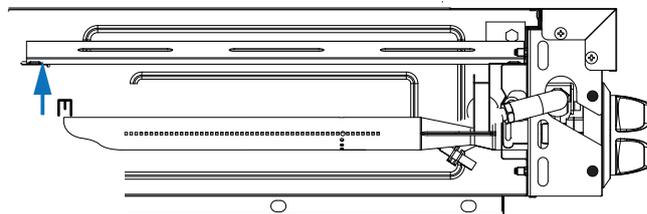

- Remove by twisting and lifting as shown in (Fig. 17)

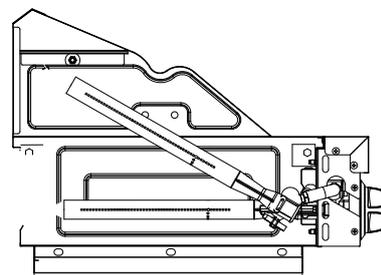

(Fig. 17)

- Clean burners as described
- Reverse the previous procedure to re-install the burners, flame diffuser and grill or hotplate

## TROUBLESHOOTING

### IF BBQ FAILS TO OPERATE PROPERLY

- Stop, turn off gas at its source and turn all burner controls to • off
- Do not smoke
- Check gas supply connections
- Repeat lighting procedure after waiting for five minutes for accumulated gases to disperse

If BBQ still fails to operate properly **TURN OFF GAS AT SOURCE, TURN BURNER CONTROLS TO OFF**, wait for BBQ to cool and check the following:

#### a) Misalignment of burner tubes over orifices

**CORRECTION:** Fig A below shows how it may look if your burner is mis-aligned. Reposition burner tube to properly sit over orifice as shown below in line drawing (fig B). This is also shown in the Time to Grill user manual trouble shooting section (included with your BBQ)

#### b) Obstruction in gas line



**CORRECTION:** Remove hose from BBQ. Open gas supply for one second to clear any obstruction from hose. Close off gas supply at source and re-connect hose to BBQ

#### c) Blocked orifice

**CORRECTION:** Remove burners as described above. Inspect gas valve orifice, clear any obstruction with a fine wire. Re-install burners over orifices and test again

#### d) Obstructed Jet Flame Ignition tube

**CORRECTION:** Insert pipe cleaner or cotton bud into Jet Flame Ignition tube and clear out any debris inside (fig C)

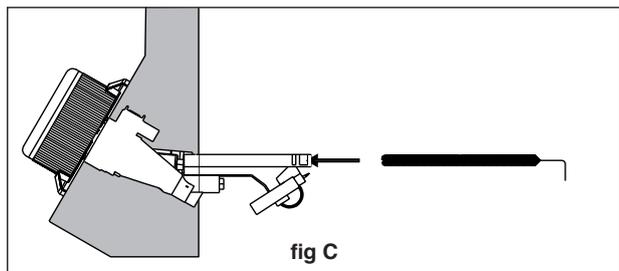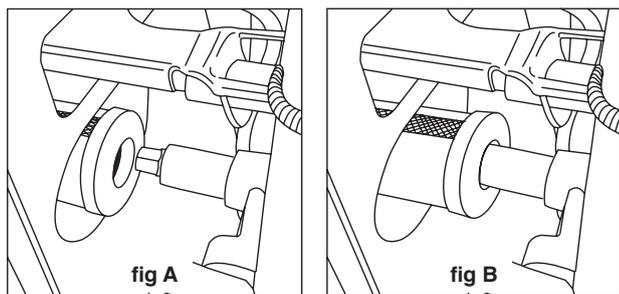

### IF THERE IS A LEAK

- Turn the gas cylinder off
- Ventilate the area to disperse any accumulated gas
- Check all connections
- If the leak persists, keep cylinder upright and take to an open area
- Keep skin away from any gas or liquid escaping from the cylinder
- Keep the cylinder at least 20 metres away from any sparks or ignition sources including electrical equipment, camera flash, engines or motors
- Disperse gas by providing maximum ventilation and spraying with a fine water spray

### IF THERE IS A FIRE

- If there is a fire at the appliance, turn the gas off at the cylinder.
  - Smother the flames with a wet cloth
- If there is a fire at the cylinder or you cannot get to the valve to turn it off**
- call the fire brigade
  - direct a garden hose to the middle of the cylinder to keep it cool, however do not extinguish the flame. If the gas is burning it won't build up and explode
  - Evacuate the area

### A note on fire prevention:

Most fires in outdoor BBQs are caused by a build up of greases and fat, or gas connections which have not been secured properly. Remember to follow the manufacturer's instructions on proper cleaning and connection procedures.

### INSECTS

Spiders and insects can occasionally spin webs or make nests in the burner tubes and the jet flame ignition. This can result in a weaker performance from the jet flame, which when ignited should extend to roughly four inches in length. Obstructions in the burners and the ignition can affect gas flow which could result in a fire. This is known as "Flashback" and can cause serious damage to the BBQ and create an unsafe operating environment. Frequent inspection and cleaning of the burner tubes and the jet flame ignition is recommended. Please see illustration below demonstrating how to clean.

## CARE AND SAFETY ADVICE

- **TAKE CARE** Grills are heavy
- Clean grills after each use for continued optimum performance.
- Roasting dishes can be placed on top of the grills.
- Ensure that the drip tray is lined with fat absorbent material such as fatsoak or sand before using.
- For safety and optimum performance ensure that your barbecue is on a level, solid surface.
- Empty the fat cup responsibly after each use.


## WARRANTY

All of our Grillstream BBQs and accessories are built to last. Our materials are carefully considered with longevity and safety in mind, the technology used in our products is second to none, and all of this is backed up with our friendly customer care team who are on hand for advice and assistance. Our Grillstream limited warranties are 10 years, giving you extra peace-of-mind. The warranty applies to the original purchaser from the date of purchase and covers manufacturing faults and defects only. If an item should fail as a result of a manufacturing fault or defect under normal domestic use, the manufacturer at their discretion will repair, refinish or replace the failed item.

The manufacturer reserves the right to substitute failed items with similar parts / products, should the model or colour no longer be available. Any replacement will be for the failed item only not a complete unit. The original warranty period is not extended in the event of a repair, refinish or replacements. In the event of a failure, it is the customer's responsibility to return the item to the store of purchase along with a copy of the receipt. Warranty specifically excludes general wear and tear, rusting of steel components and parts, corrosion, commercial use and damage caused as a result of failure to observe reasonable care, maintenance and assembly instructions.



In all instances where a product is not covered by one of our limited warranties a standard 12 month warranty will apply. Below is a list of the limited warranties we currently have in place for Grillstream Barbecues:

- Dual Skin Hood:** 10 year limited warranty, which excludes mechanical damage
  - Jet Flame Ignition, Manifold and Valve System (Excluding Side Burners):** 3 year limited warranty
  - Burners against corroded through:** 3 year limited warranty
  - Grillstream Grills against corroded through:** 3 year limited warranty
  - Flame Tamers against corroded through:** 2 year limited warranty
- \*All other parts are covered by a 1 year warranty against manufacturing defects

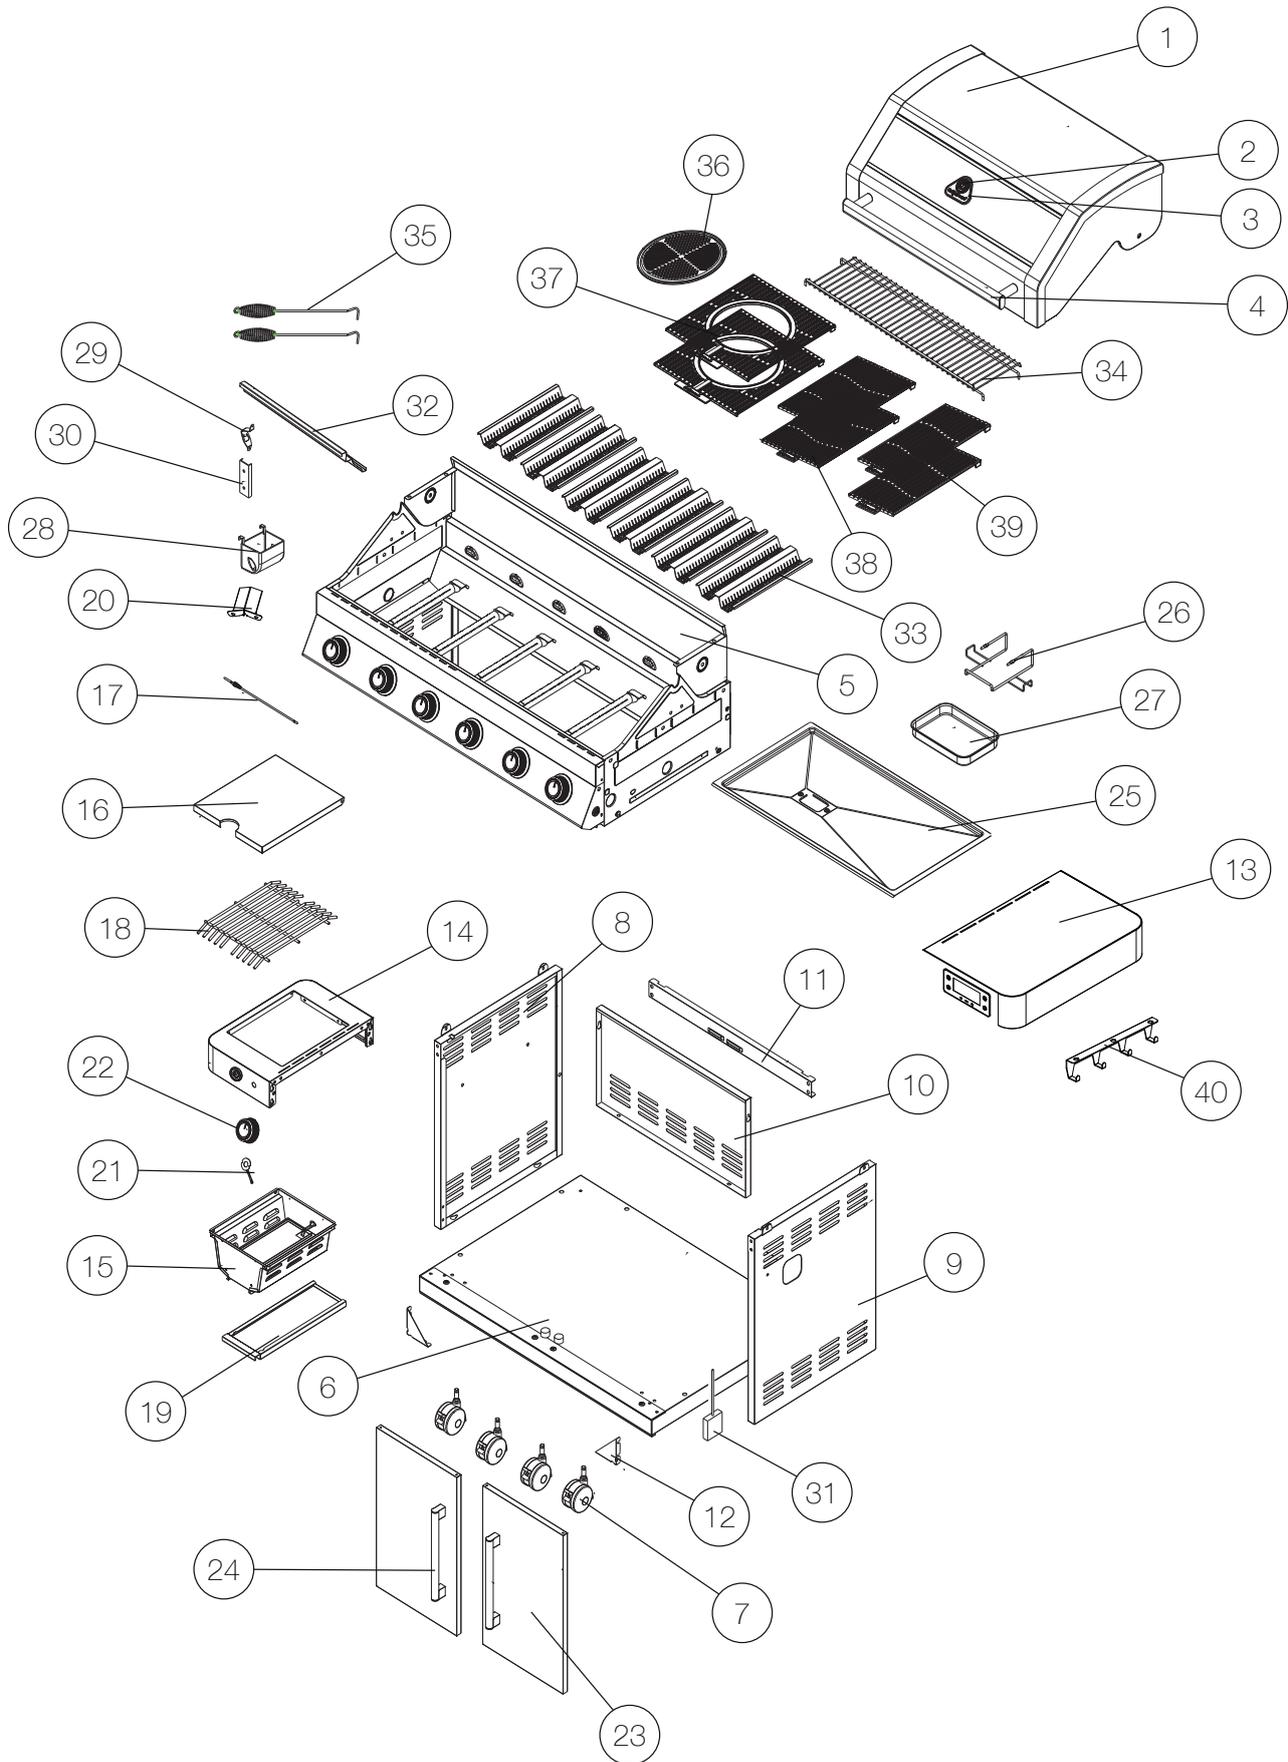

No.	Description	QTY	No	Code	QTY
1	Hood	1	21	LED Circuit Board	1
2	Thermometer	1	22	Side Burner Control Knob	1
3	Grillstream Logo Plate	1	23	Cabinet Door	2
4	Hood Handle	1	24	Cabinet Door Handle	2
5	Cooking Frame	1	25	Grease Tray	1
6	Cabinet Base Panel	1	26	Grease Cup Bracket	1
7	Castor	4	27	Grease Cup	1
8	Cabinet Side Panel - Left	1	28	Grillstream Fat Cup	1
9	Cabinet Side Panel - Right	1	29	Bottle Opener	1
10	Cabinet Rear Panel	1	30	Bottle Opener Bracket	1
11	Front Support Bar	1	31	Battery Pack	1
12	Corner Support Bracket	2	32	Fat Channel	1
13	Side Shelf	1	33	Hybrid Flame Tamer	4
14	Ceramic Side Burner Side Shelf	1	34	Warming Rack	1
15	Ceramic Side Burner Assembly	1	35	Grill Lifter	2
16	Side Burner Lid	1	36	Circular Griddle Plate	1
17	Side Burner Lid Axle	1	37	395mm Grillstream Gastro Grill	2
18	Ceramic Side Burner Grill	1	38	295mm Grillstream Grill	2
19	Ceramic Side Burner Drip Tray	1	39	195mm Grillstream Grill	2
20	Probe Buffer	1	40	Tool Hook Rack	1


## || FITTINGS

Part	A		Part	B		Part	C		Part	D	
QTY	7	M4x12 Bolt	QTY	12	M6x12 Bolt	QTY	2	Door Spindle	QTY	4	Washer
Part	E										
QTY	2	M4x12 SS Bolt									

Make sure your grill is assembled properly. Detailed assembly instructions are packed with each grill giving specific assembly procedures for each model. Follow these instructions carefully to ensure the correct and safe assembly of the grill.

**Caution:** Although we take every effort to ensure that the assembly process is as easy as possible, it is inherent with fabricated steel parts that corners and edges can cause cuts if improperly handled during assembly procedures. Be careful while handling any parts during assembly. It is strongly recommended that you protect hands with a pair of work gloves.

## || TOOLS REQUIRED (NOT SUPPLIED)

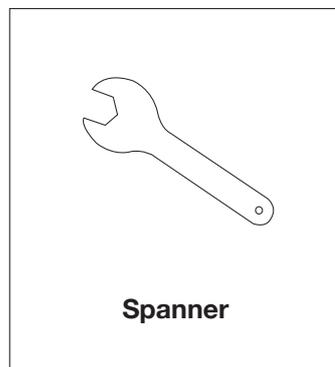


## || PREPARE FRAME FOR ASSEMBLY

Lift hood, remove & unpackage all items except burners & burner assembly.

Proceed to step 1


**|| STEP 1**

Push each of the Castors (7) into indicated holes in underside of Cabinet Base Panel (6) until you hear a click.

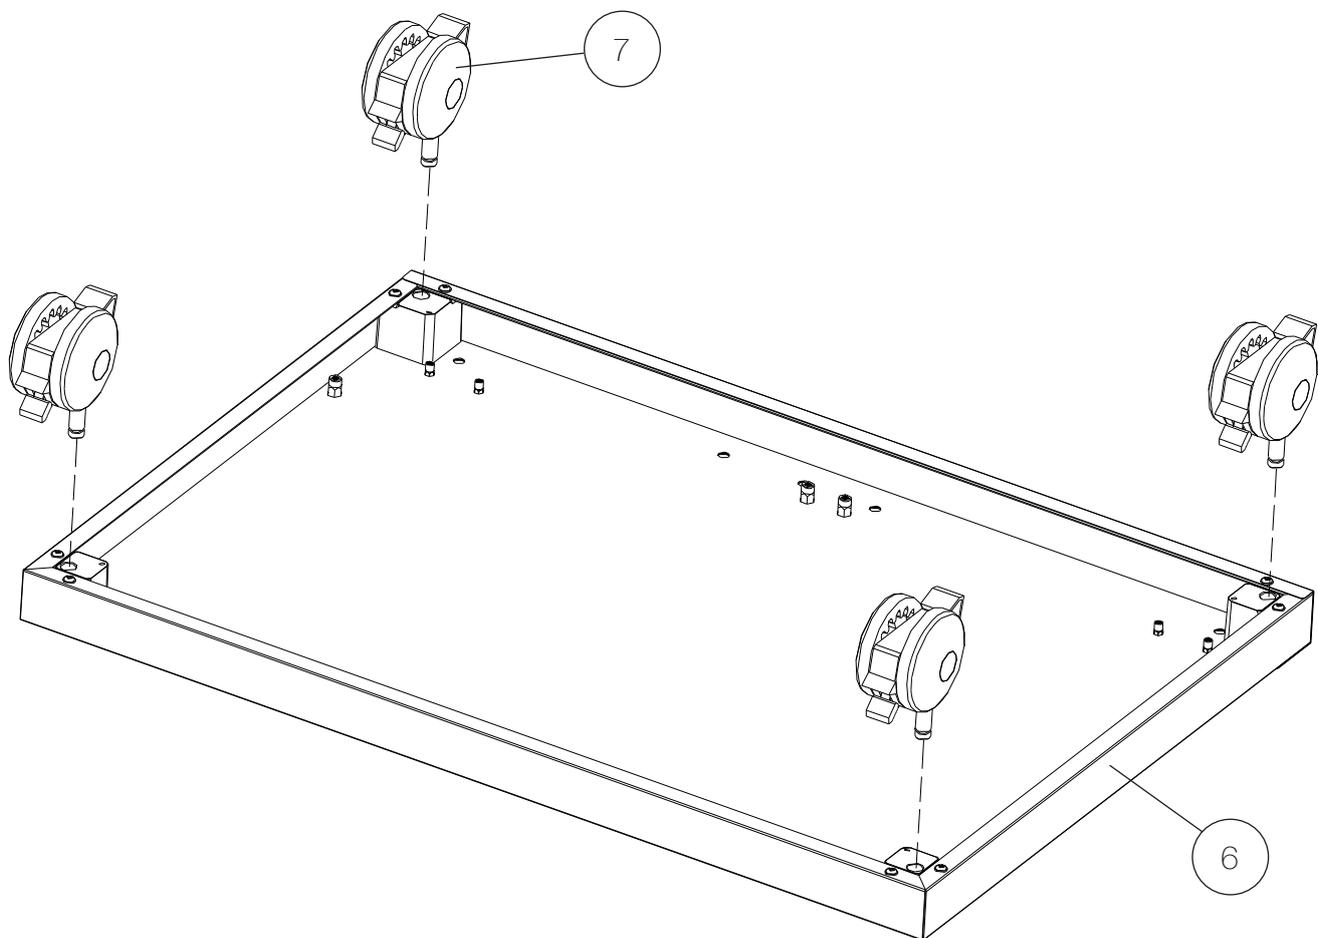

## || STEP 2


Part unscrew the bolts indicated from Cabinet Base Panel (6), slot the Cabinet Side Panels (8 & 9) into place and retighten bolts.

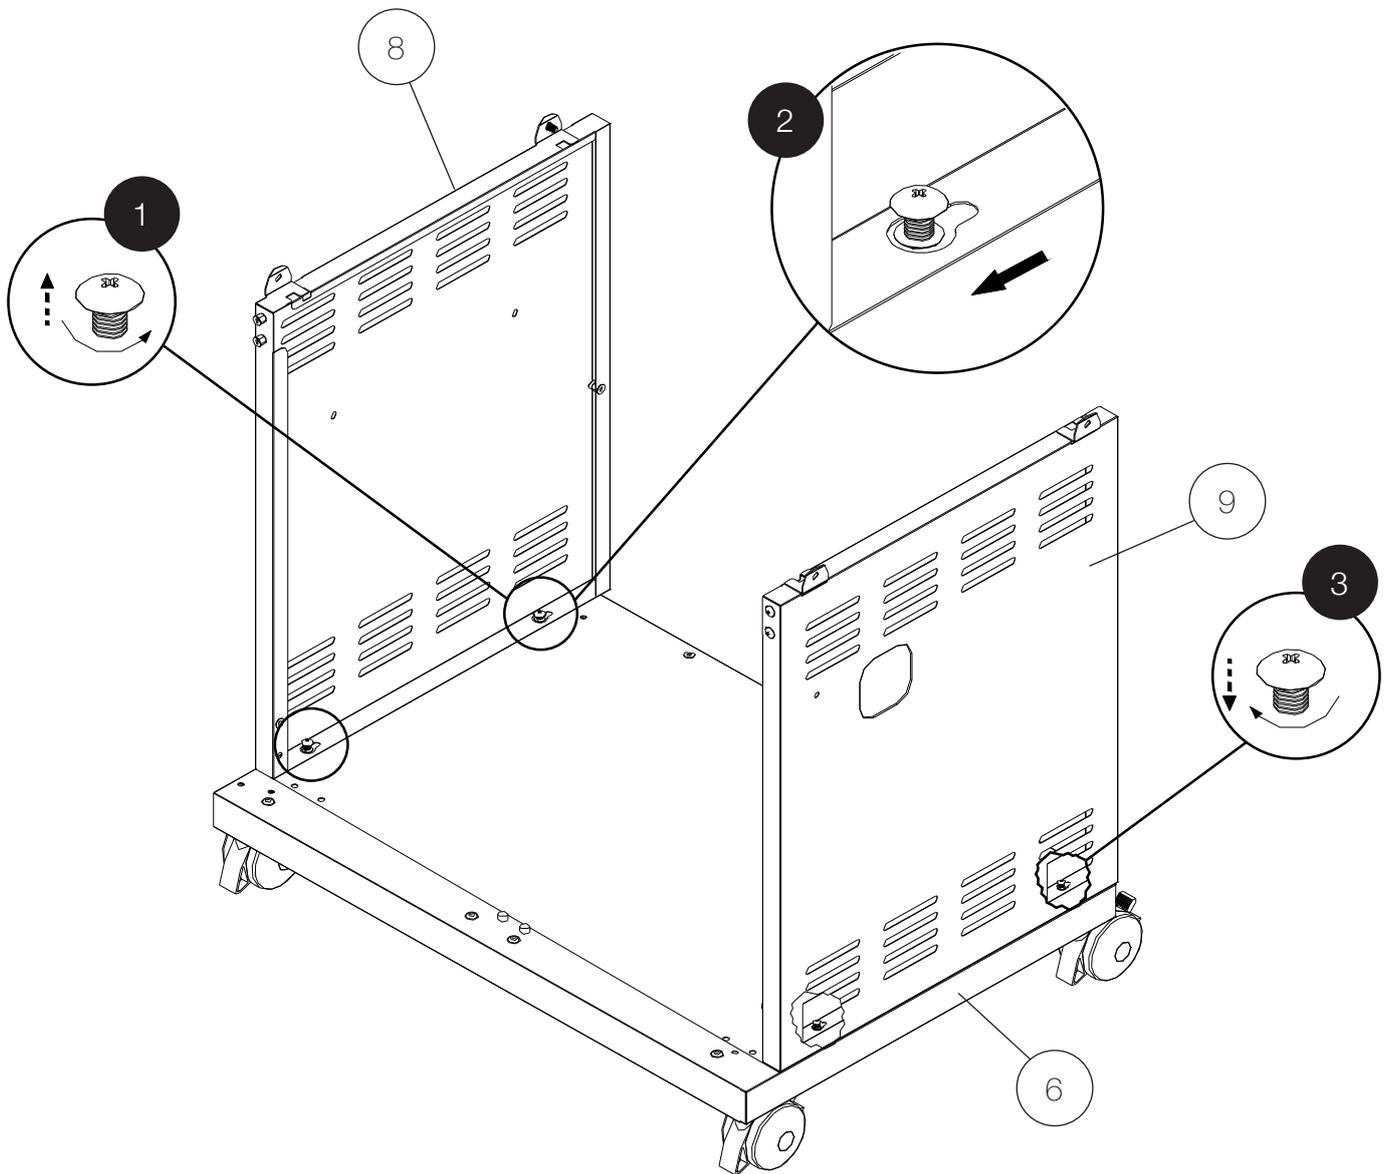

**|| STEP 3**


Insert and part tighten 2 x Bolt (B) into Cabinet Side Panels (8 & 9). Slot Cabinet Rear Panel (10) into place and secure to Cabinet Base Panel (6) with 2 x Bolt (B). Now fully tighten bolts into Cabinet Side Panels (8 & 9).

Part	B	
QTY	4	M6x12 Bolt

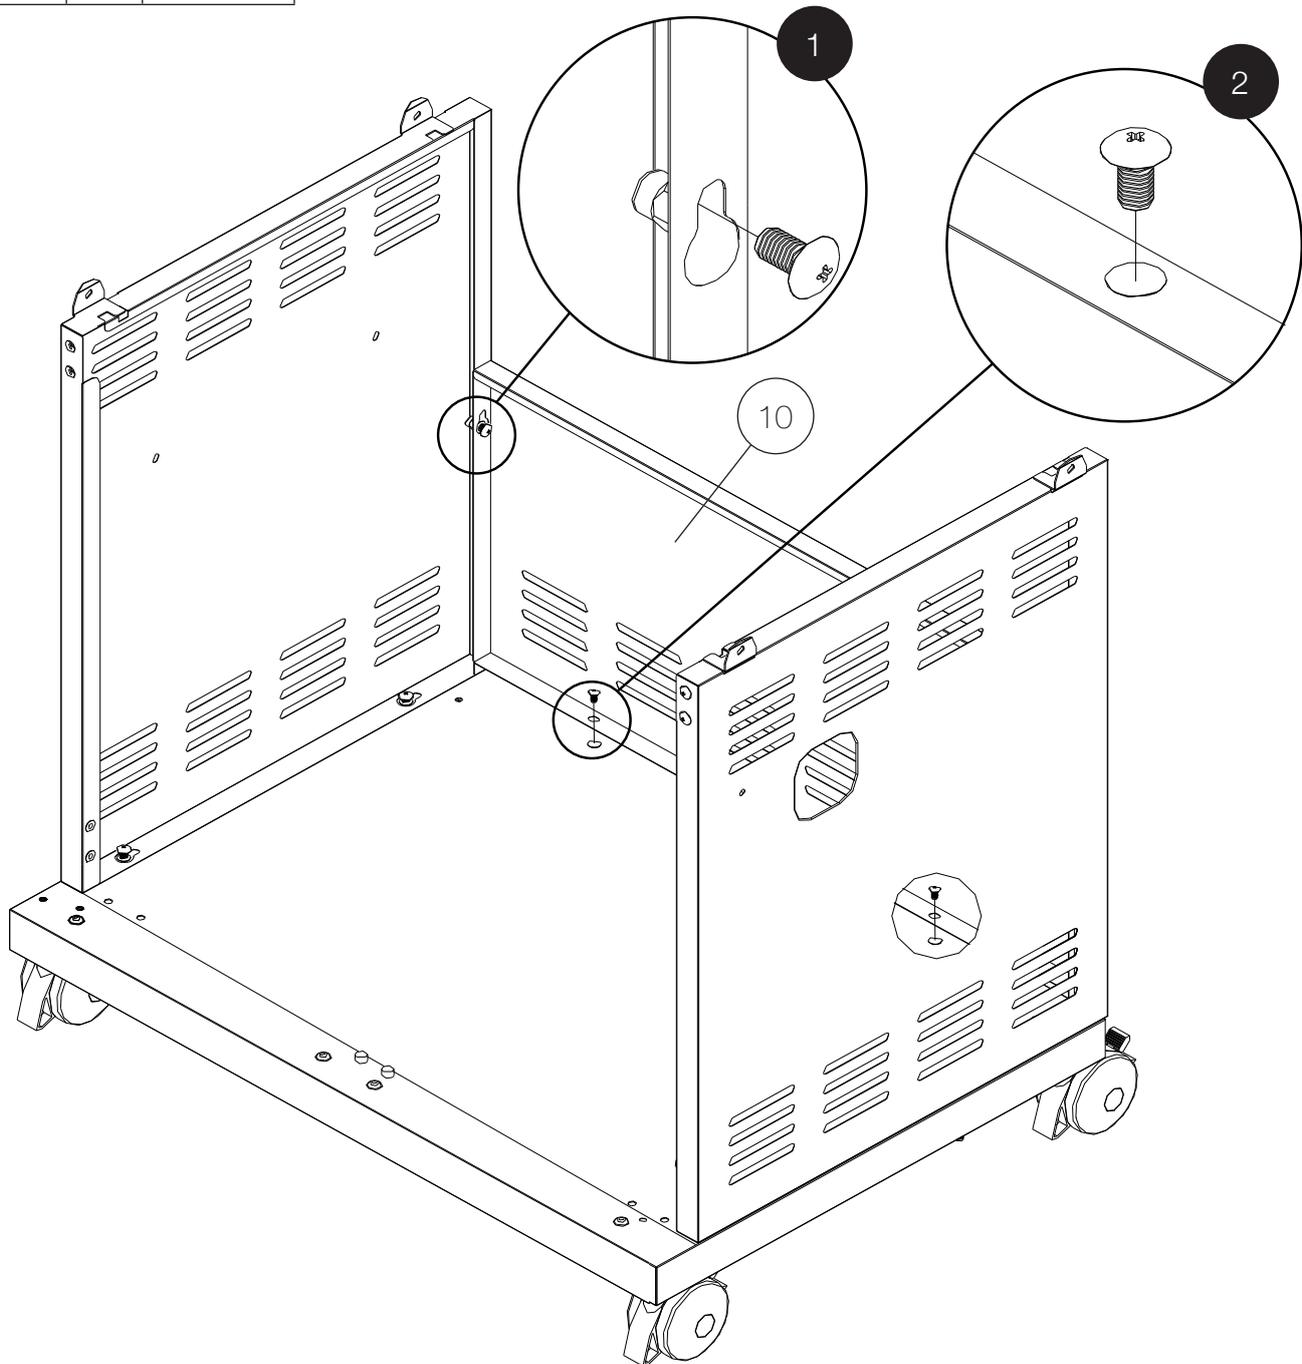

## || STEP 4


Part unscrew bolts indicated from Cabinet Side Panels (8 & 9) and Cabinet Base Panel (6). Slot Corner Support Brackets (12) in place and retighten bolts.

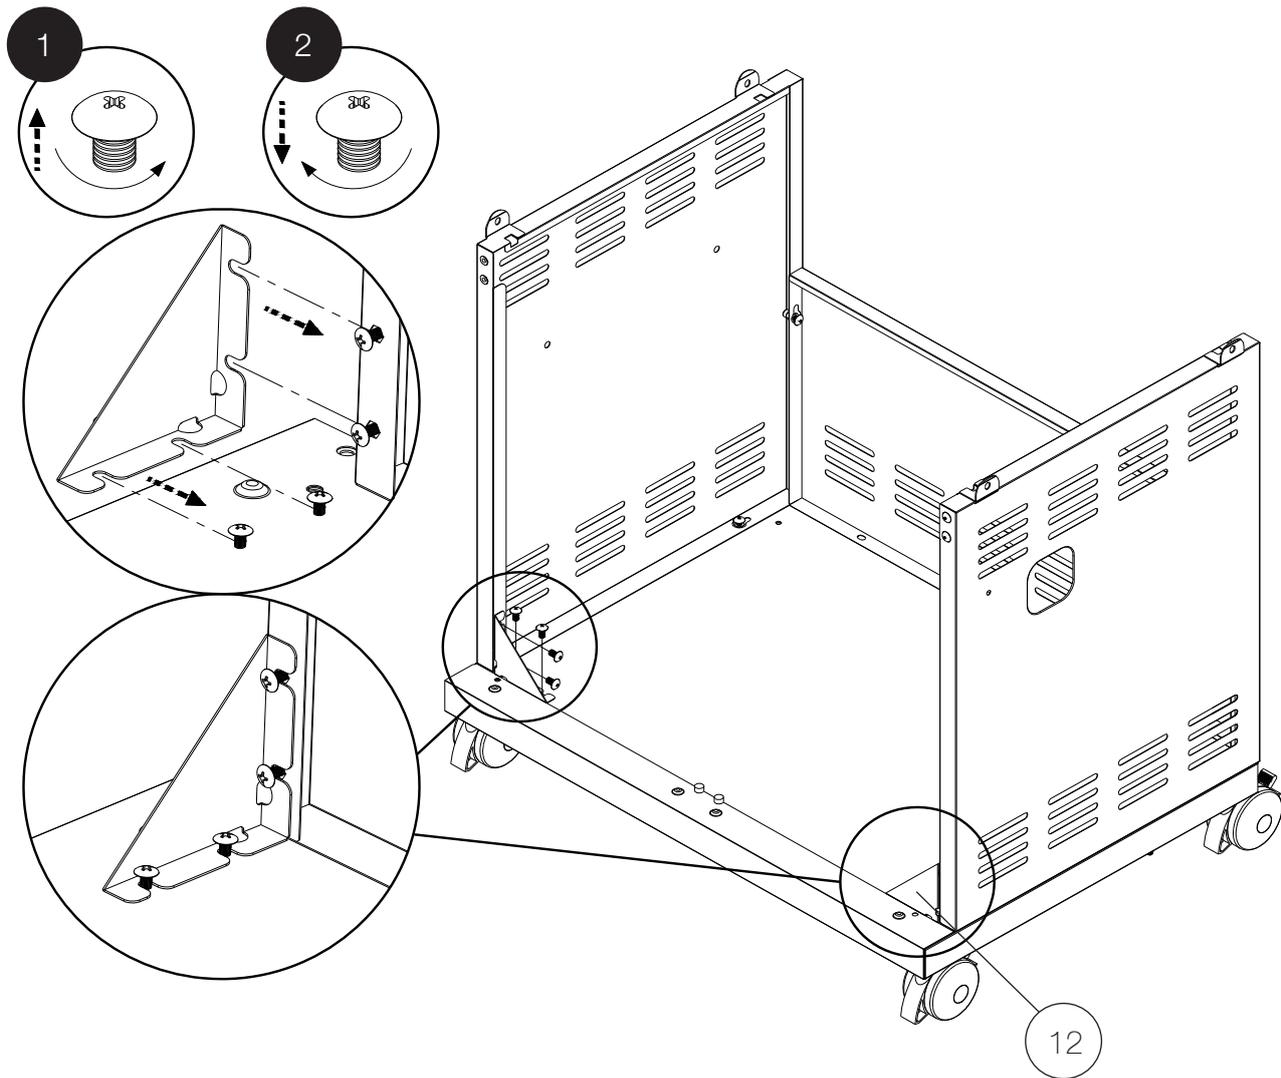

## || STEP 5

Insert Front Support Bar (11), ensuring magnets are at the bottom edge, and secure with 4 x Bolt (A).


Part	A	
QTY	4	M4x12 Bolt

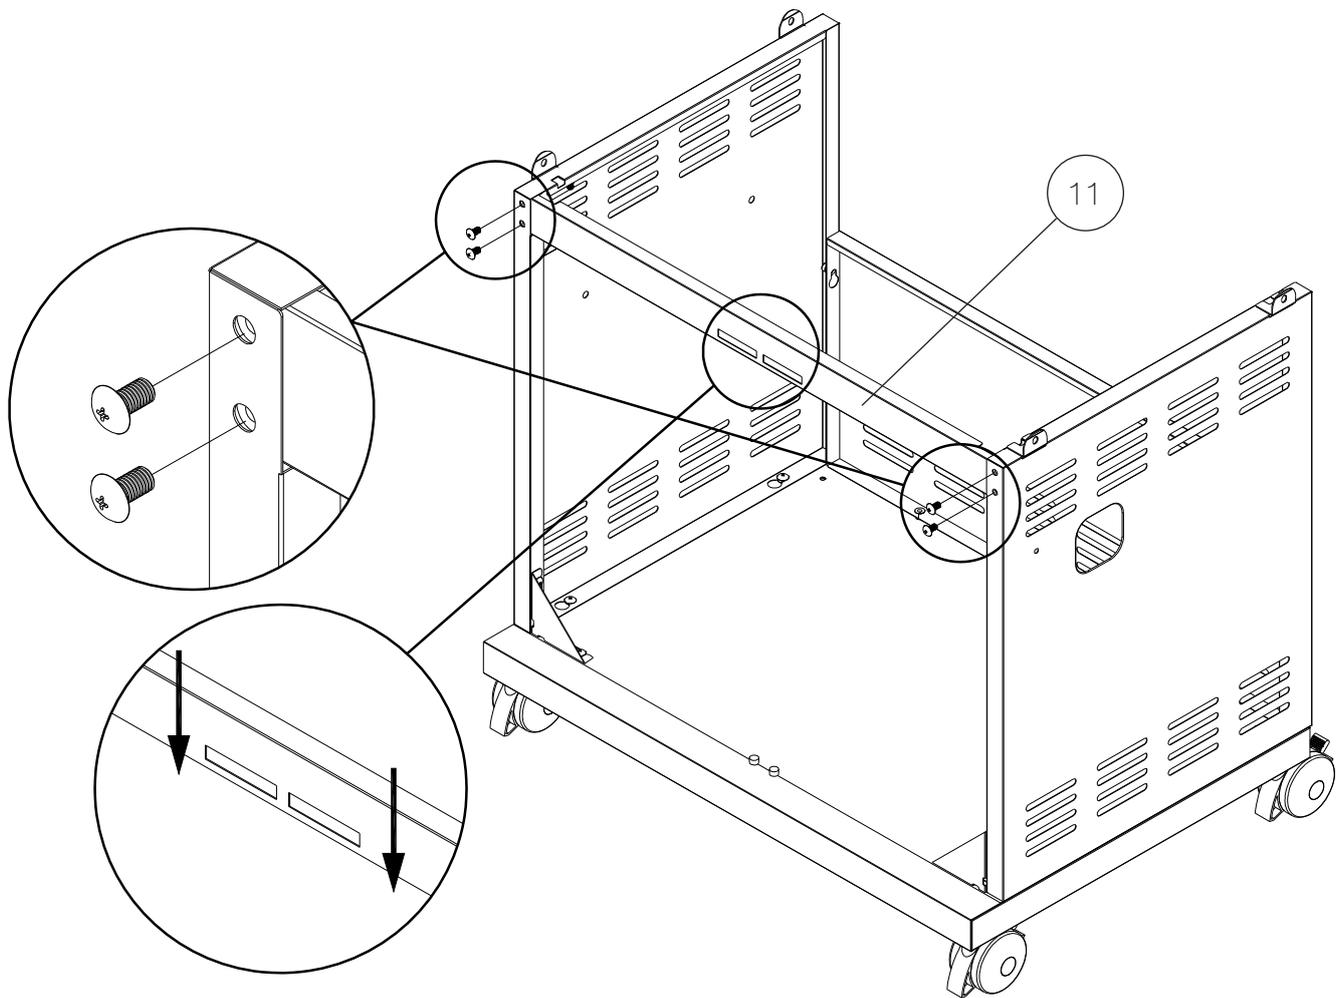

## || STEP 6

Unscrew and remove Wingnut and Washer from Thermometer (2). Thread Thermometer Spindle through Grillstream Logo Plate (3) and then through Glass Window of Hood (1). Replace Washer and Wingnut. Note: Do not overtighten as this could lead to damaging of the Glass Window.


Carefully lower cooking frame onto cabinet, ensuring fixing lugs are on the outside and that no wires or hoses are trapped between cooking frame and cabinet.

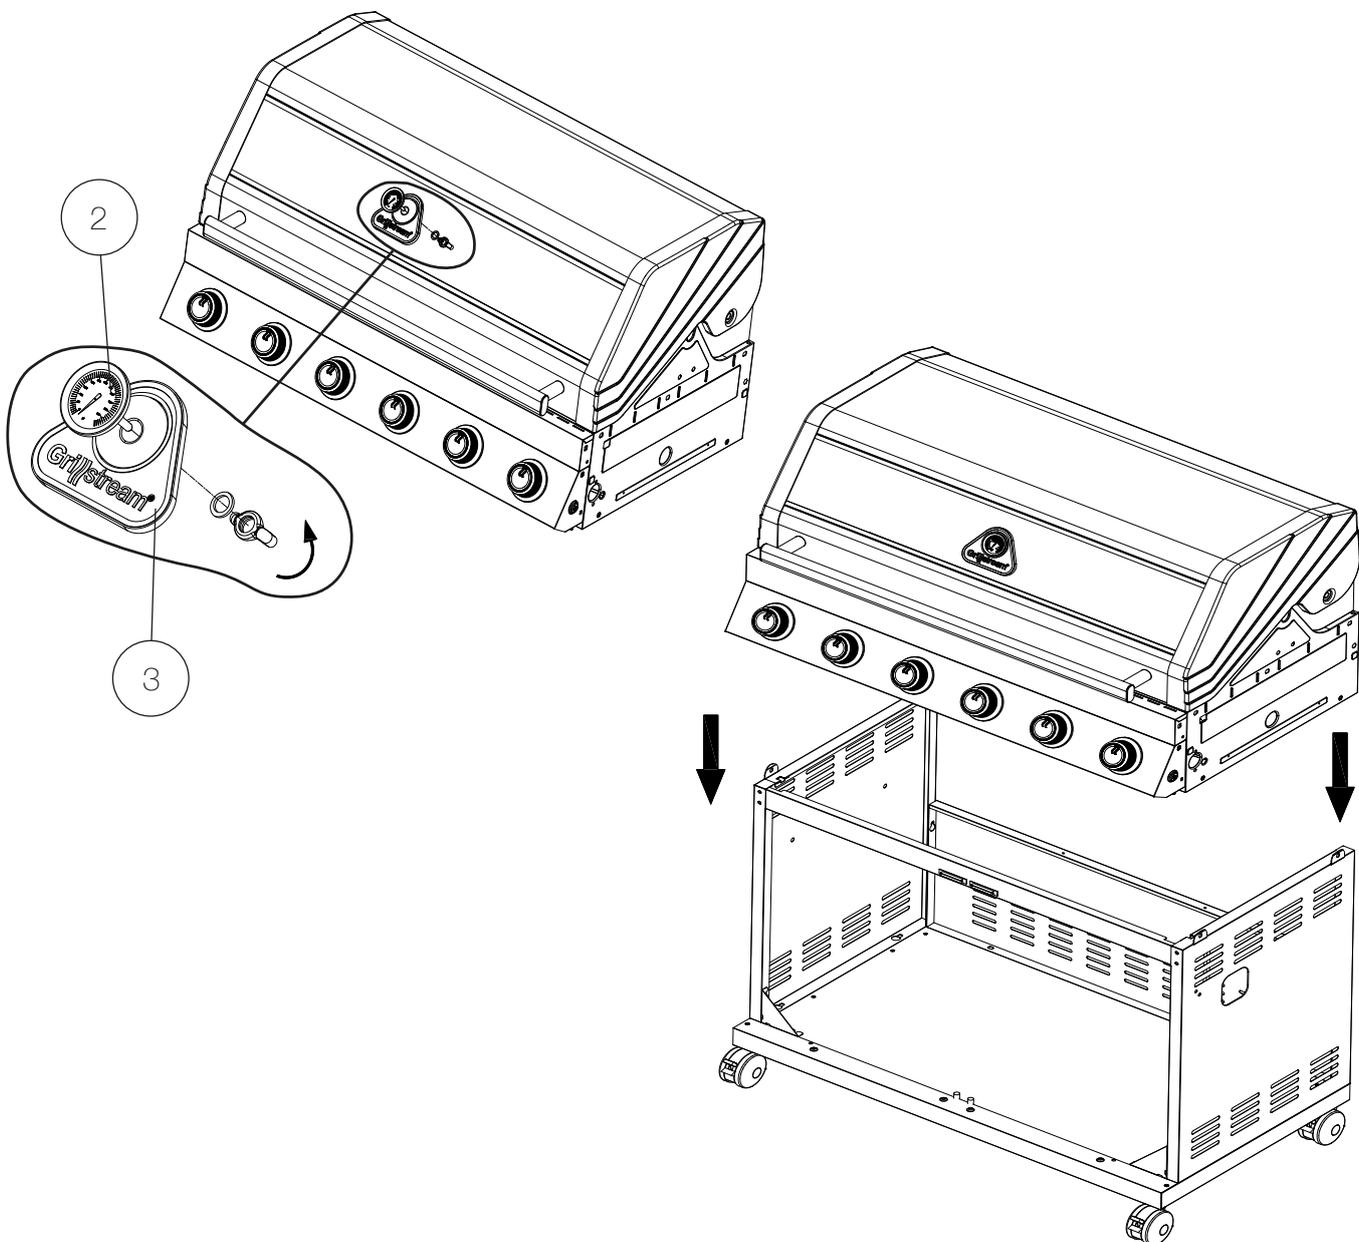

**|| STEP 7**



Secure cooking frame to side panels (8 & 9) using 4 x Bolt (B).

Part	B	
QTY	4	M6 x 12 Bolt

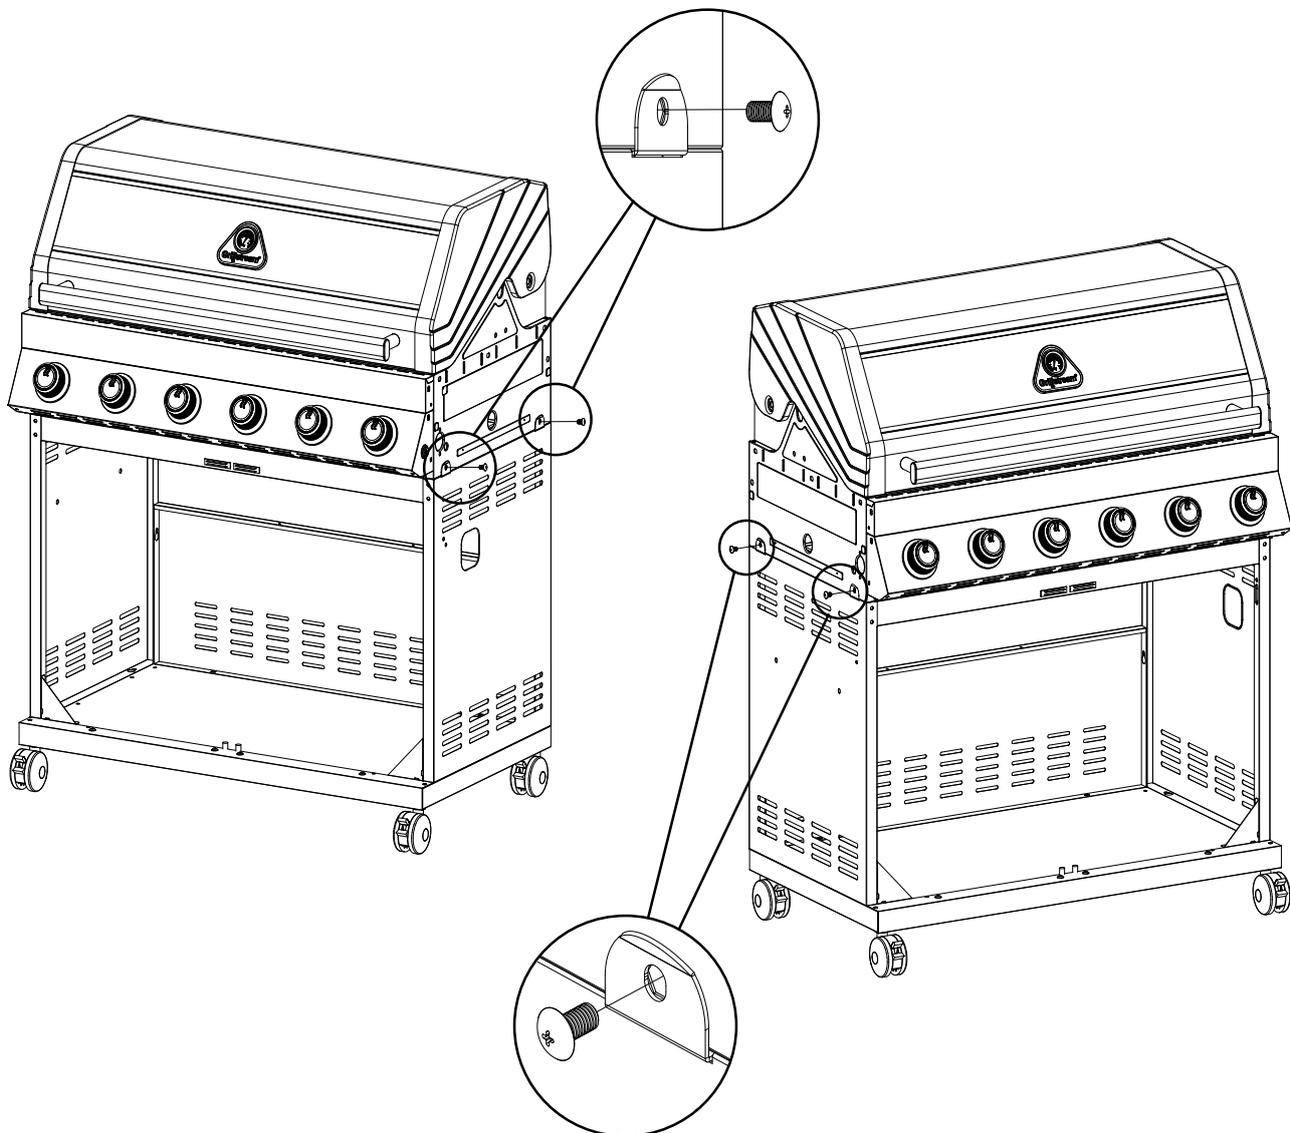

**|| STEP 8**


Part unscrew bolts on side of Cooking Frame (5) as indicated. Slot Side Shelf (13) in place and re-tighten bolts to secure.

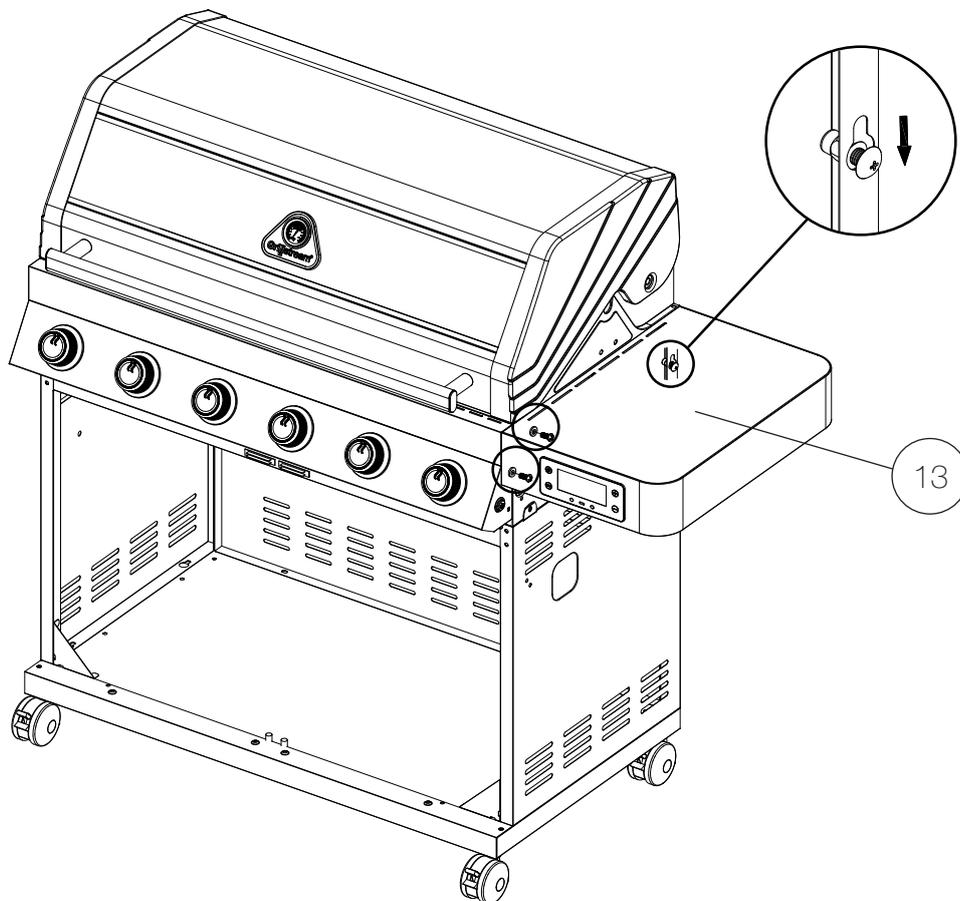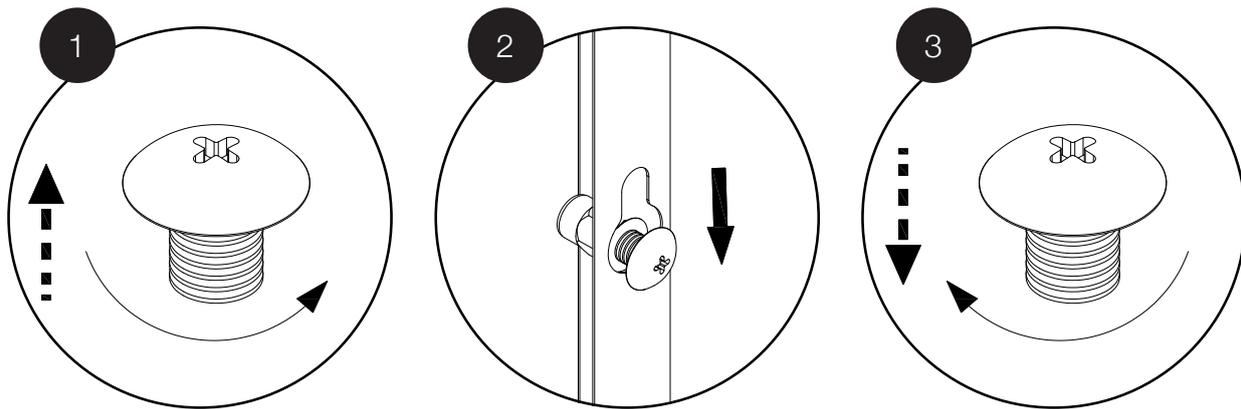

**|| STEP 9**


Further secure Side Shelf (13) in place from inside the Cooking Frame using 2 x Bolt (B) and 2 x Washer (D). Note: Washers (D) are domed and bottom of dome should be facing the Cooking Frame.

Part	B		Part	D	
QTY	2	M6 x 12 Bolt	QTY	2	Washer

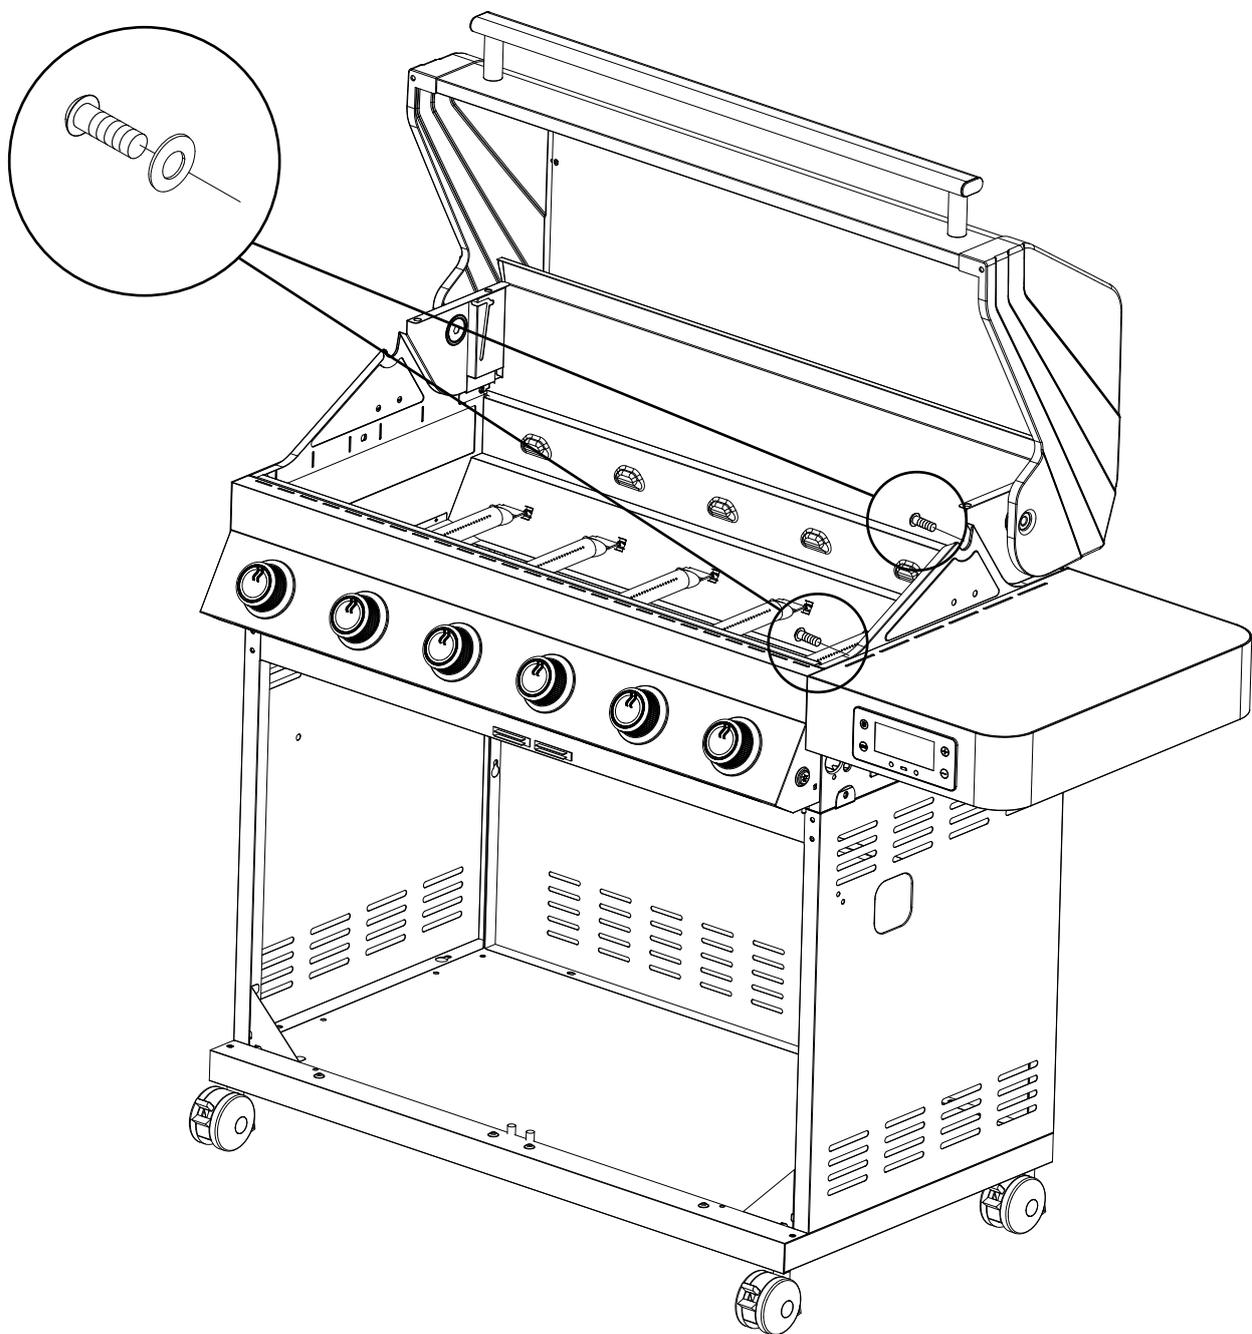

## || STEP 10


Part unscrew bolts on side of Cooking Frame (5) as indicated. Slot Ceramic Side Burner Shelf (14) in place and retighten bolts to secure.

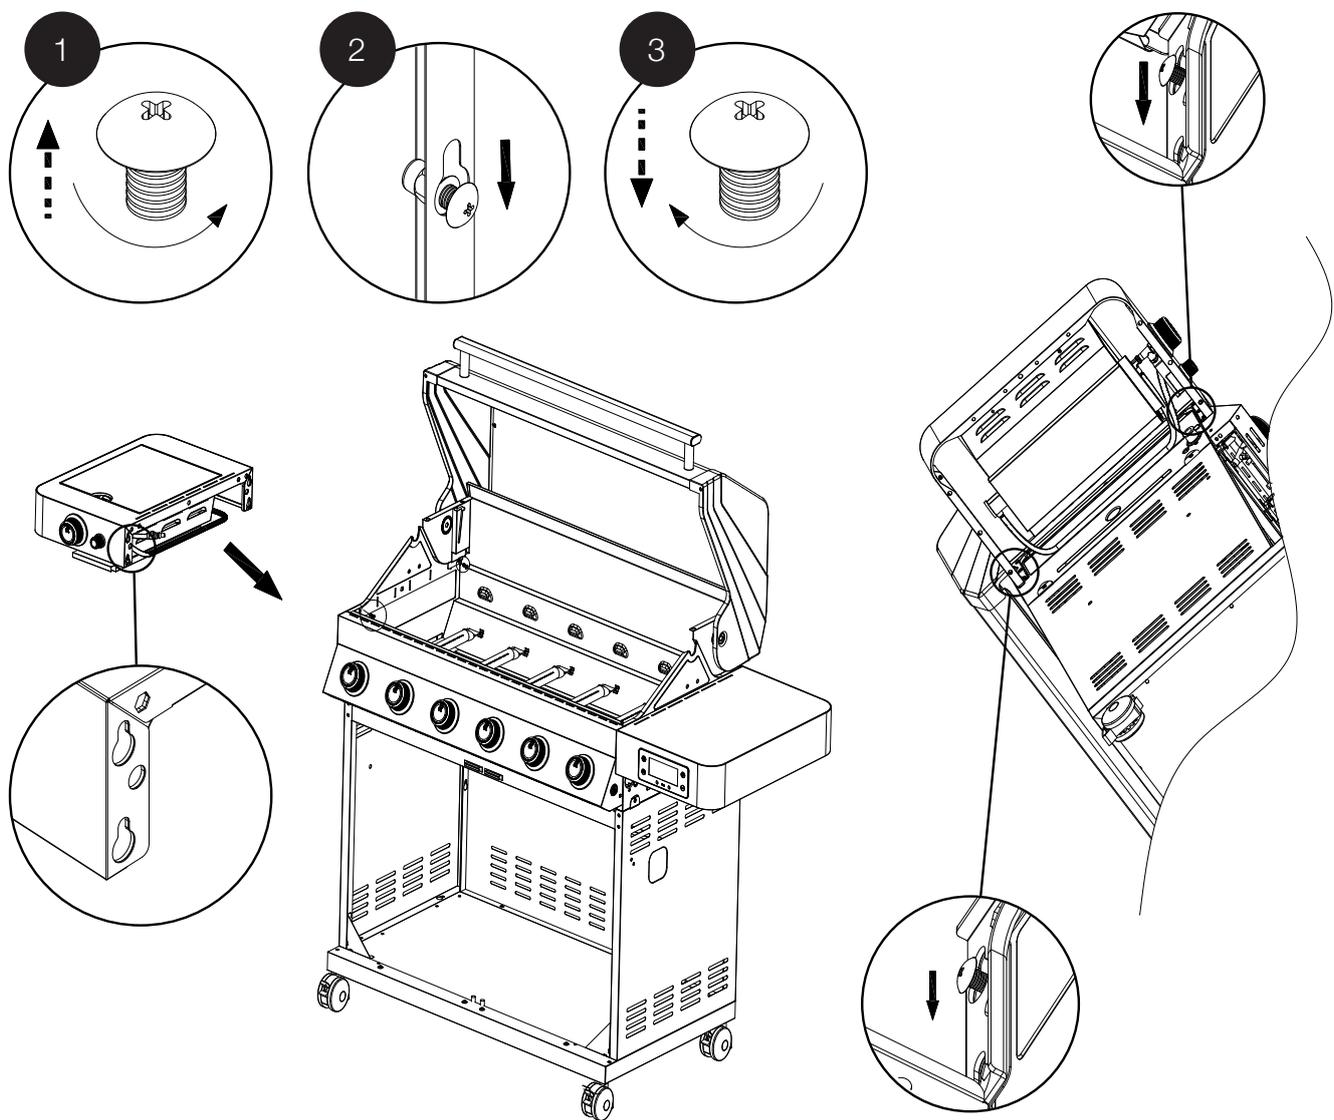

## || STEP 11


Further secure Ceramic Side Burner Shelf (14) in place from inside the Cooking Frame using 2 x Bolt (B) and 2 x Washer (D). Note: Washers (D) are domed and bottom of dome should be facing the Cooking Frame.

Part	B		Part	D	
QTY	2	M6 x 12 Bolt	QTY	2	Washer

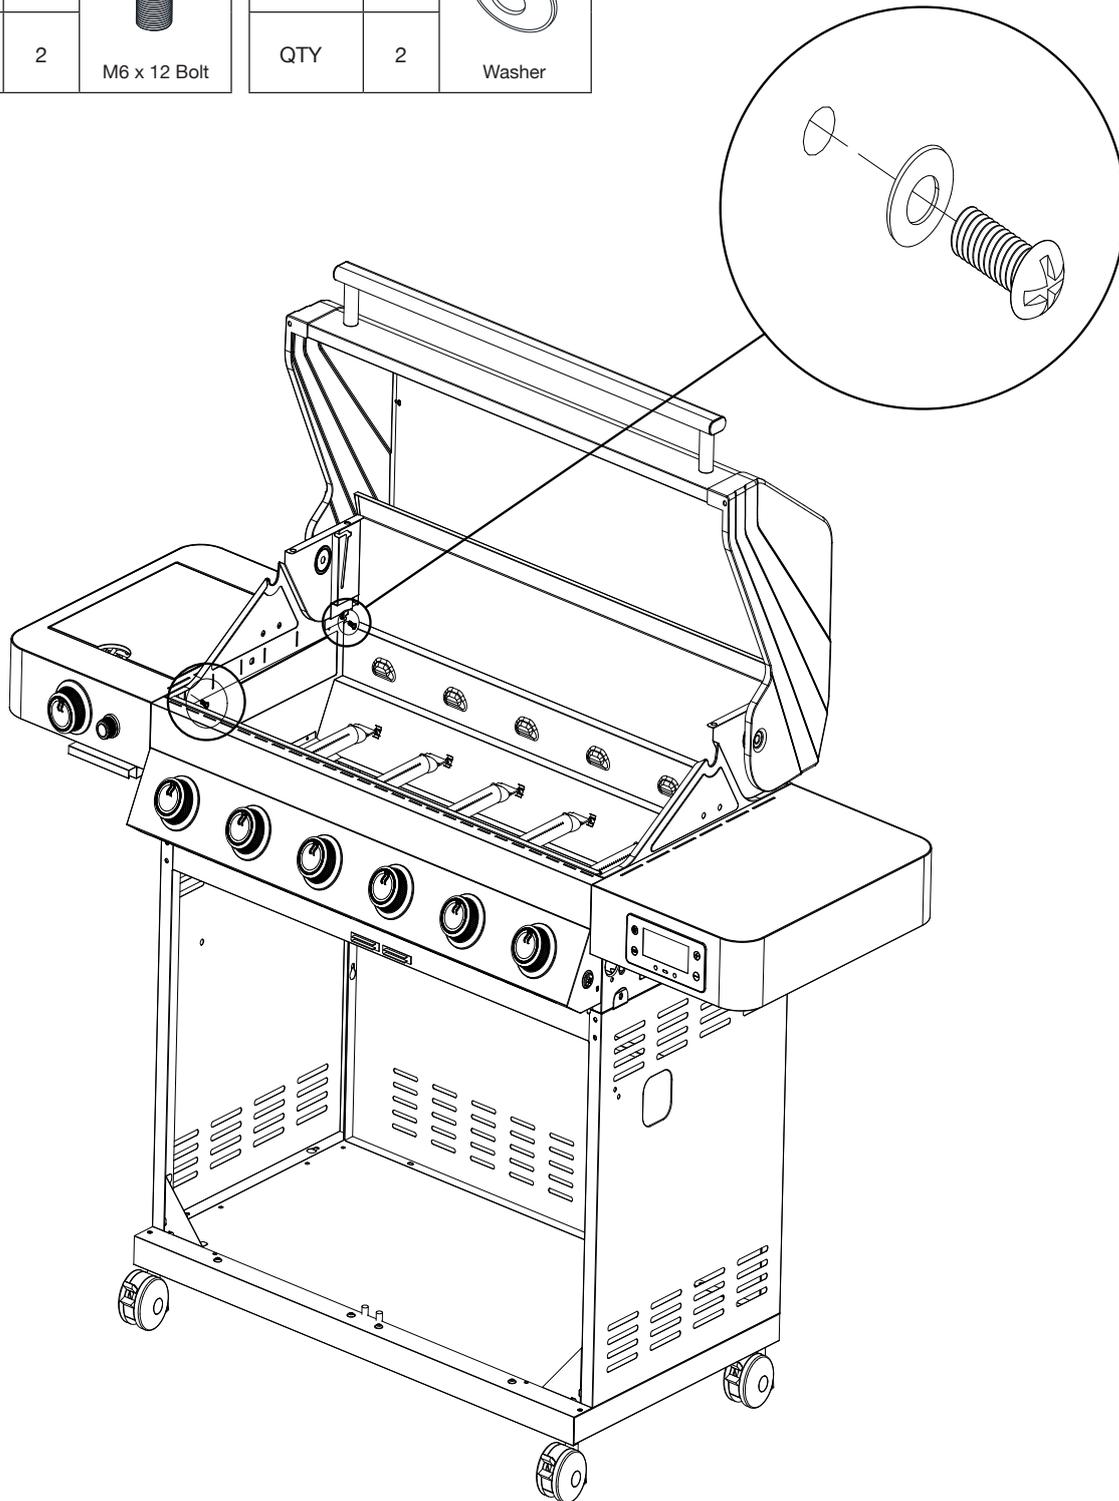


## || STEP 12

Connect Side Burner Hose to terminal on Cooking Frame by pulling back the movable section on the manifold and pushing hose in firmly. To disconnect, pull back the movable section on manifold and pull apart. Please ensure you perform a gas leak check on this connection as instructed at the end of this manual.

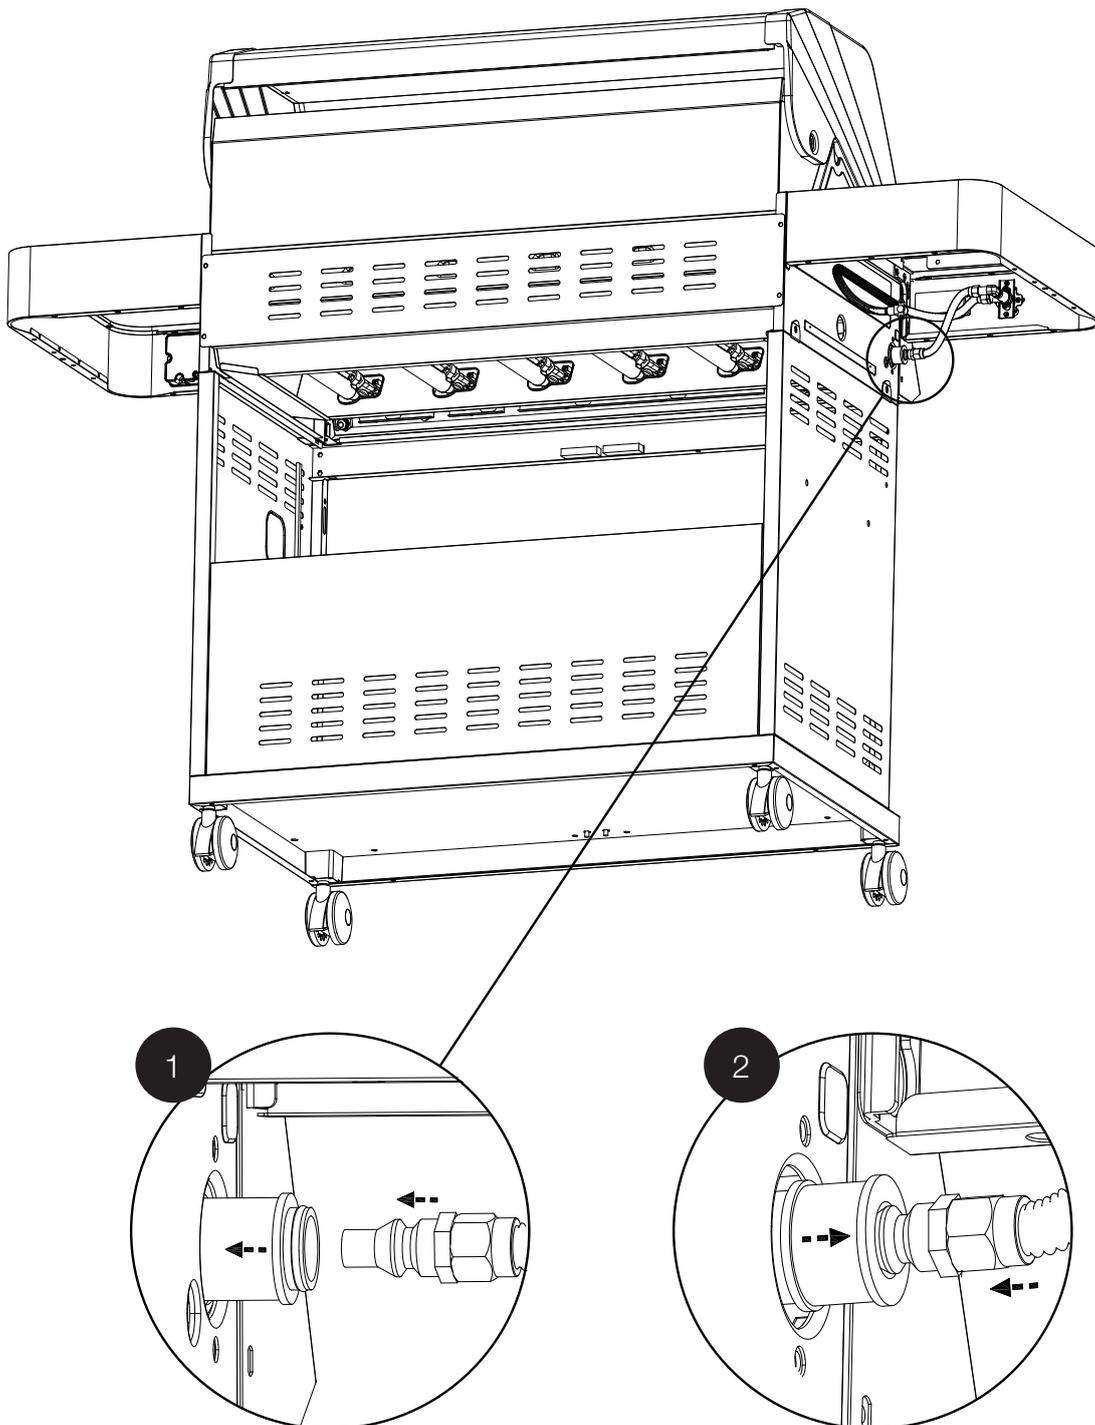

## || STEP 13


Unscrew button from Side Burner Ignition and insert 1 x AA Battery (supplied), paying attention to polarity as indicated. Now screw Ignition Button back in place.

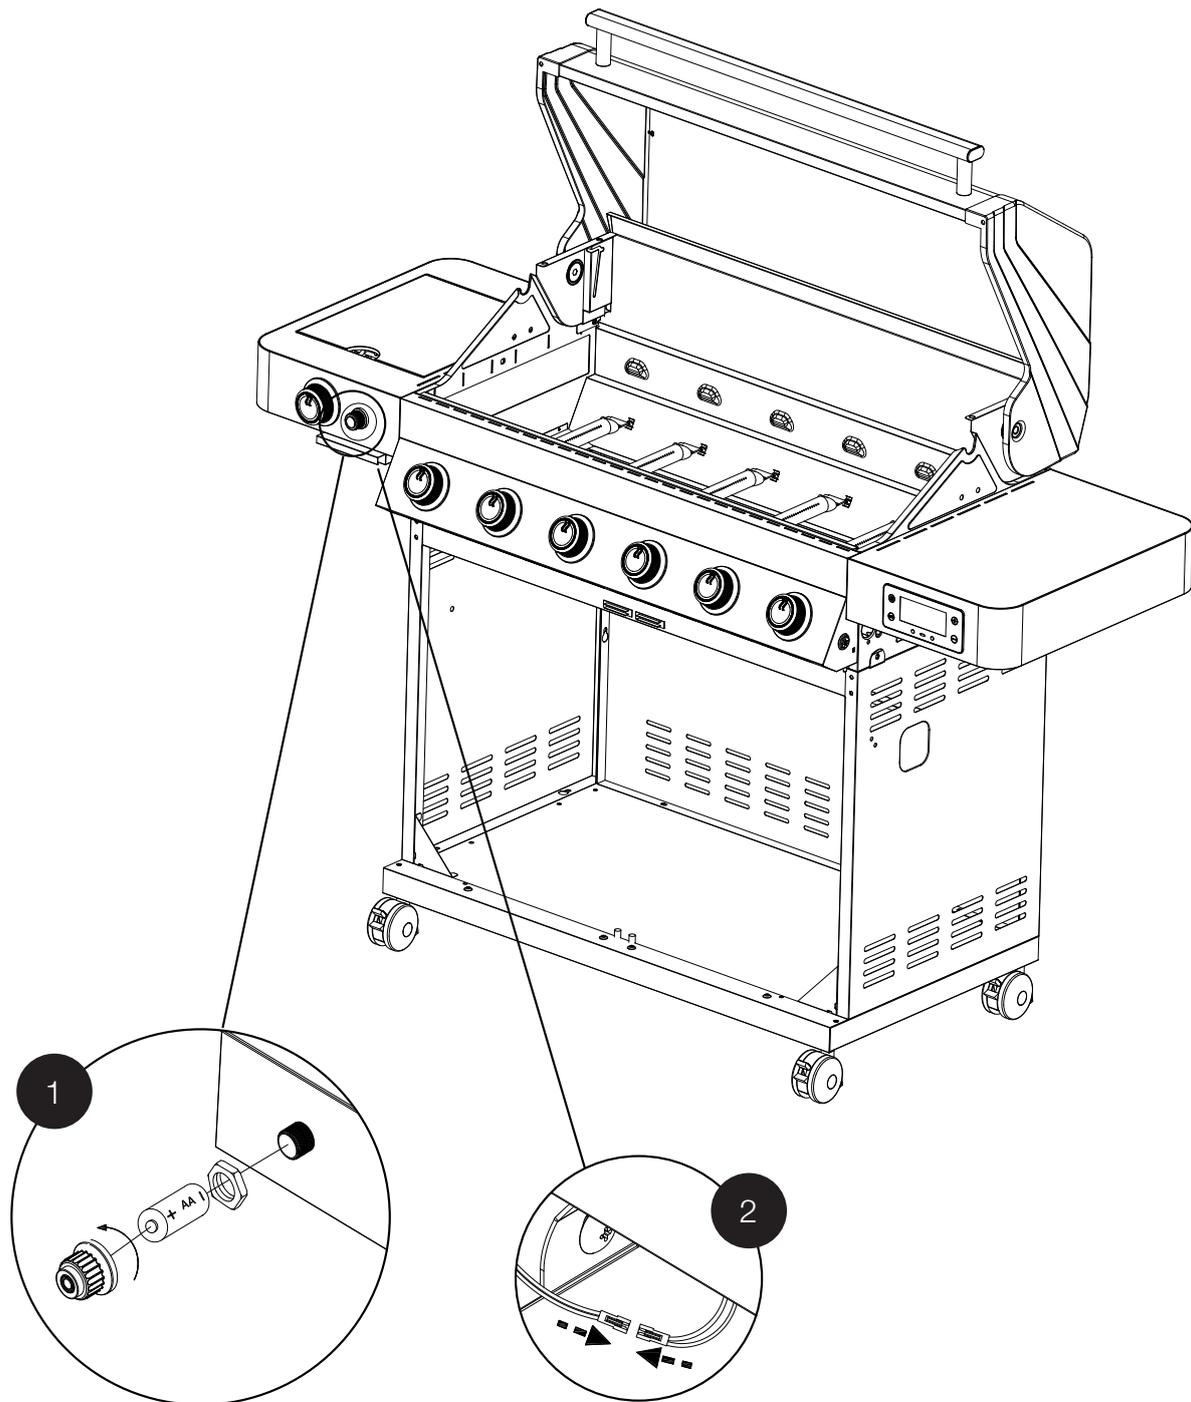

**|| STEP 14**

Attach Gas Connection Bracket to Side Panel (9) using Bolt (A). Now tighten the nut above the Gas Connection Bracket, this will help hold the hose in place when you attach the hose and regulator later. Note: The Gas Connection Bracket and Hose will be attached behind the Control Panel via cable tie, please cut the cable tie carefully to avoid damaging the components behind the Control Panel.

Part	A	
QTY	1	M4x12 Bolt

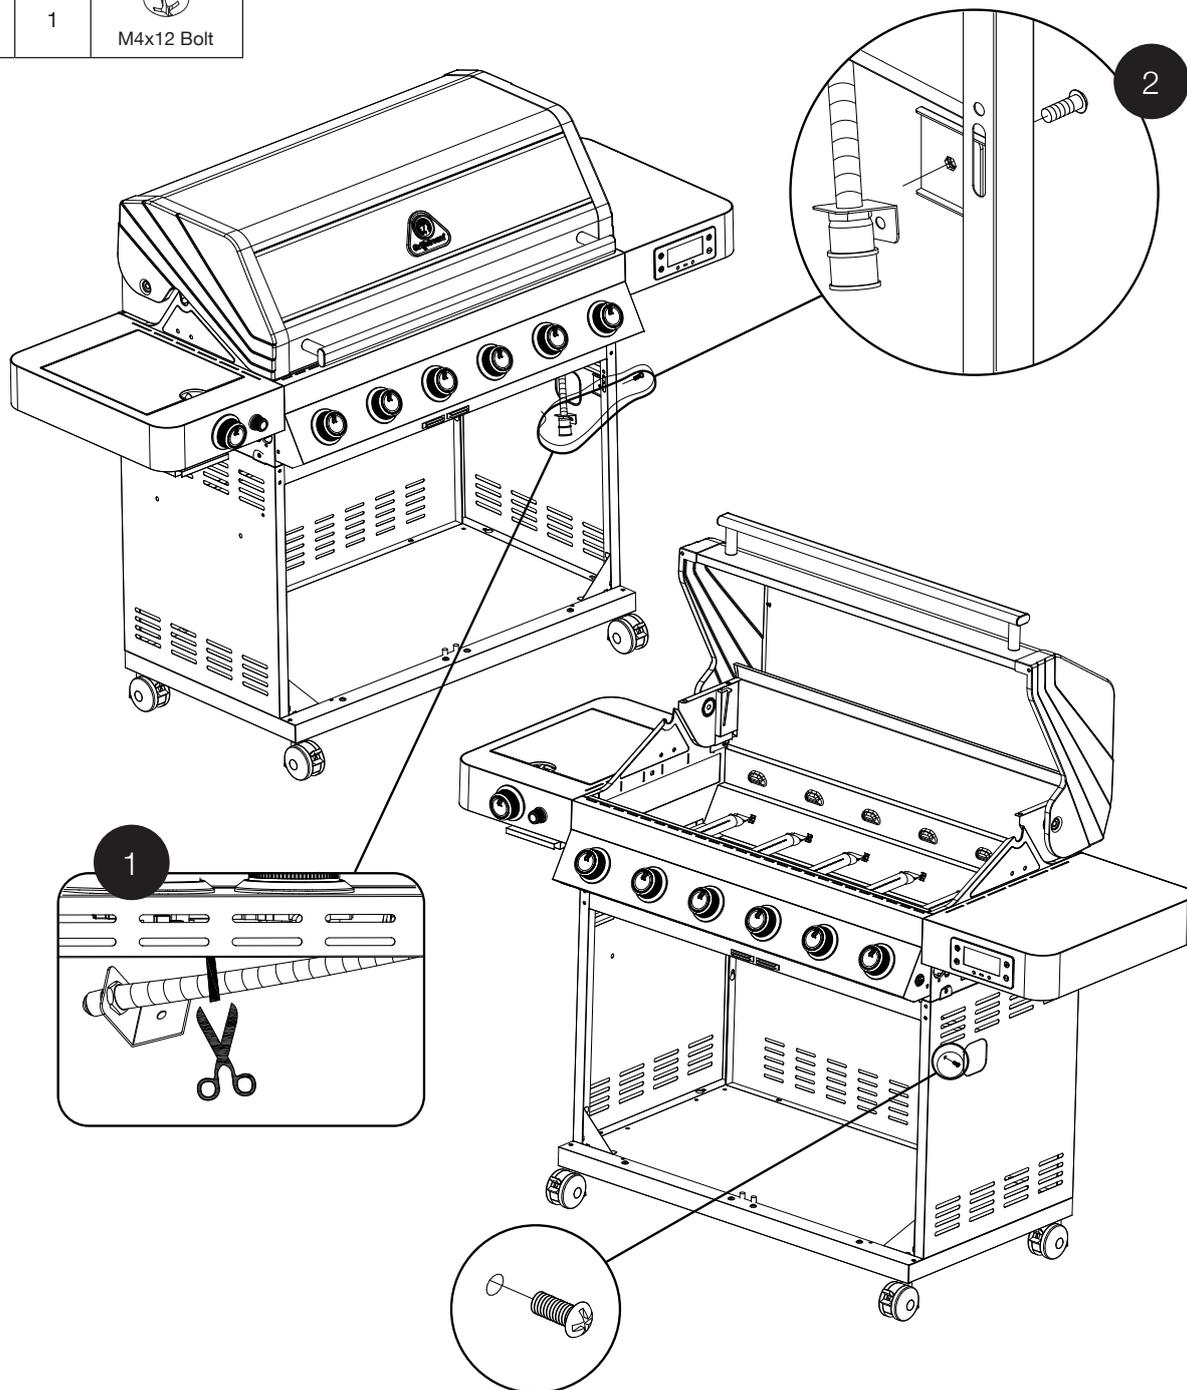



**|| STEP 15**

Pass spacers and bolts from separate bolt pack through Cabinet Doors (23) and screw into Door Handles.

Insert Door Spindles (C) into Cabinet Base Panel (6).

To fit Cabinet Doors (23) in place, first slide the hole on bottom of door over Door Spindle (C), depress spring-loaded catch on underside of Cooking Frame and position top of door until spring-loaded catch slides into top hole.


Part	C	
QTY	2	Door Spindle

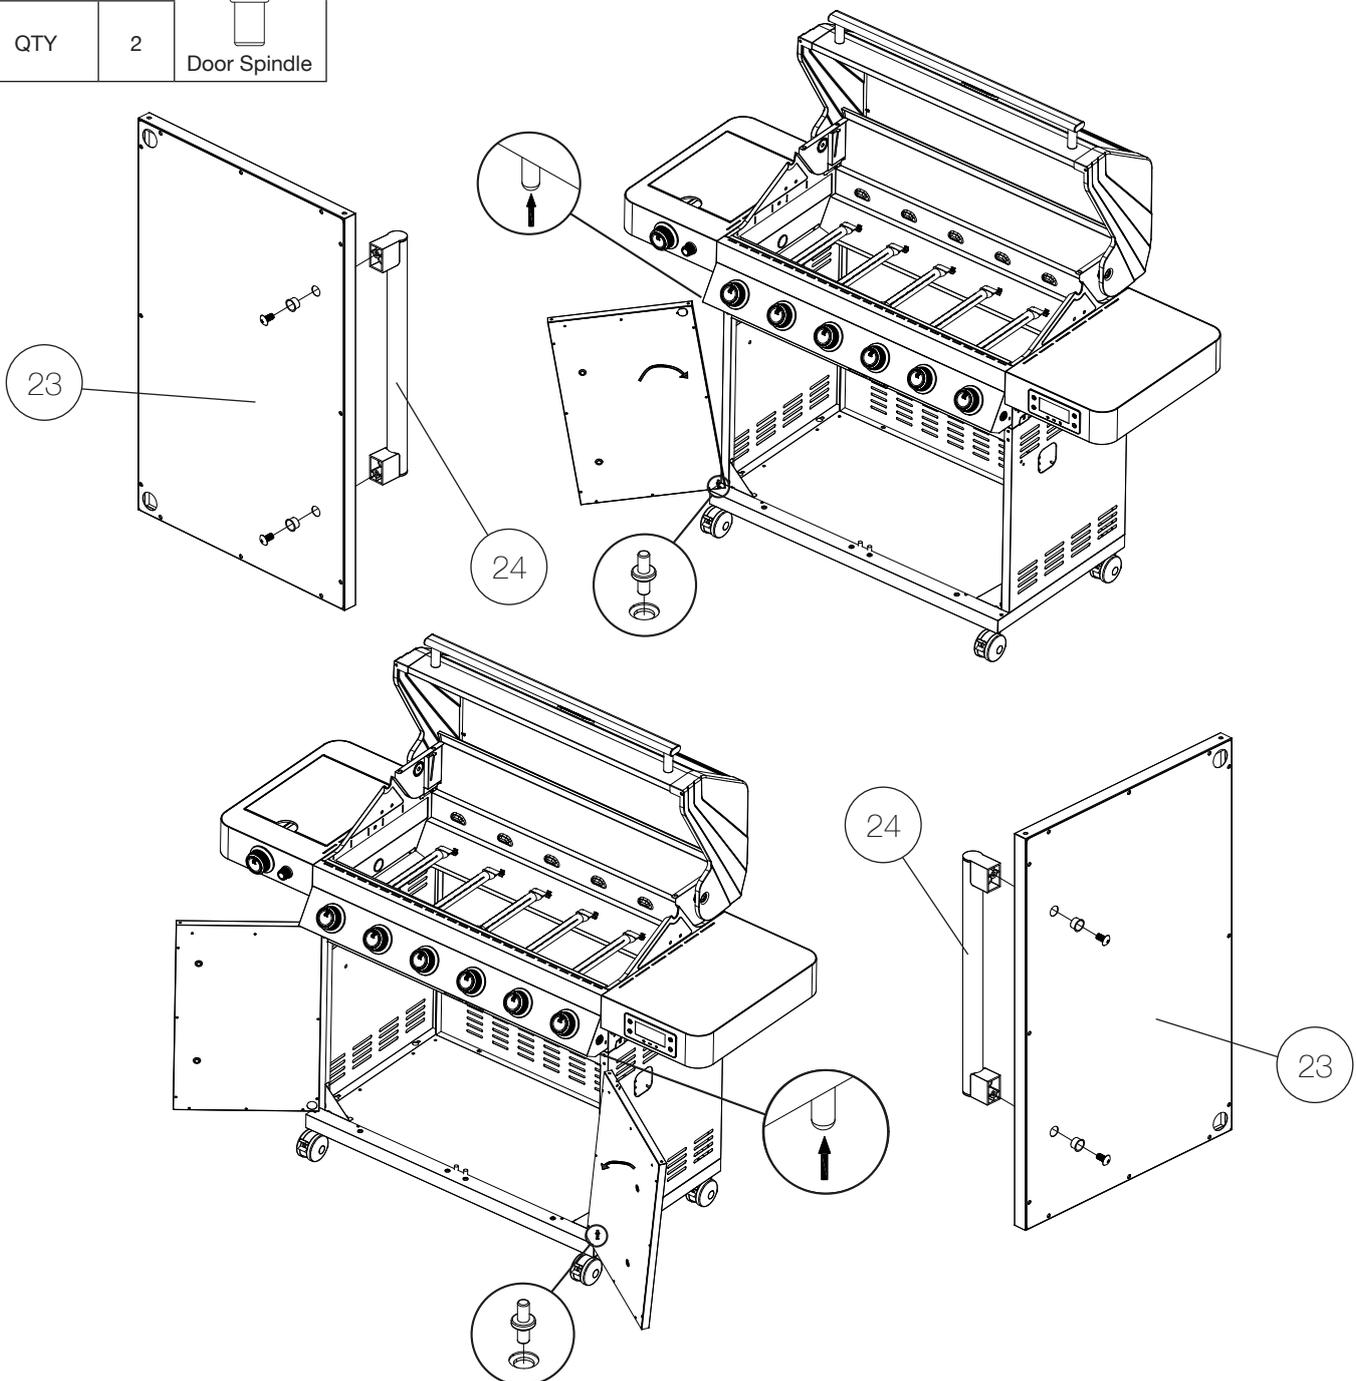

**|| STEP 16**

Attach Grease Cup Bracket (26) to underside of Grease Tray (25) using 2 x Bolt (A). Place Grease Cup (27) inside Grease Cup Bracket (26) and then slide underneath Cooking Frame ensuring it is level and on top of runners.


Part	A	
QTY	2	M4x12 Bolt

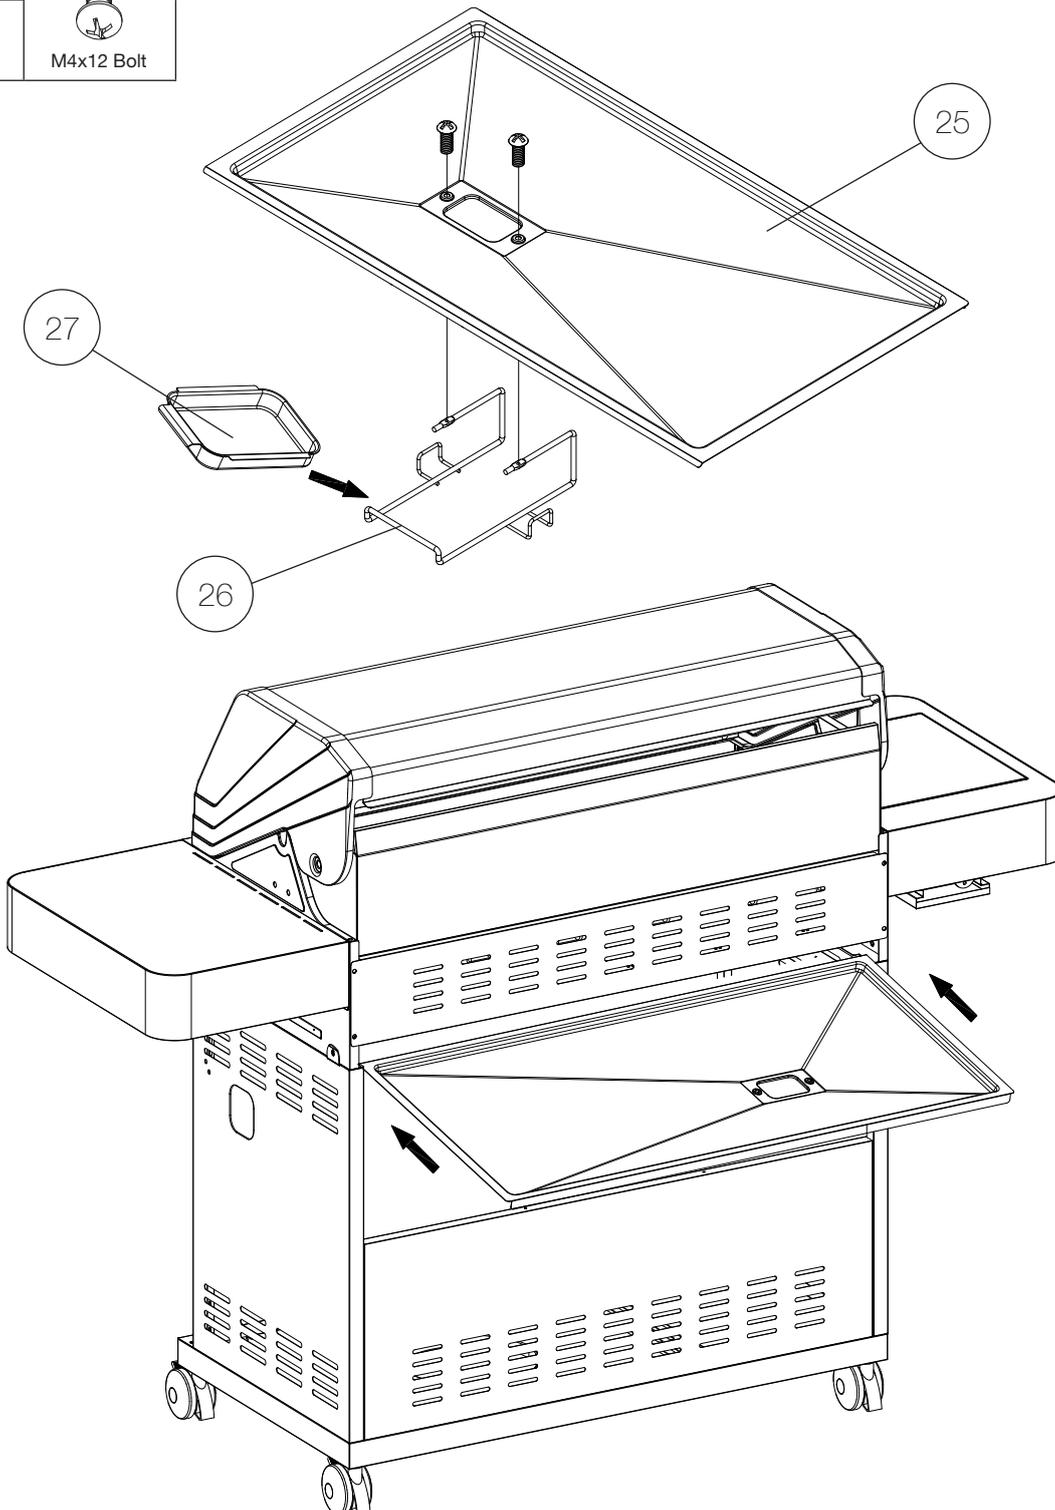

## || STEP 17

Slot Probe Buffer (20) over Temperature Probe located inside Cooking Frame (5) and secure in place using 2 x Bolts (E).

Part	E	
QTY	2	M4x12 SS Bolt

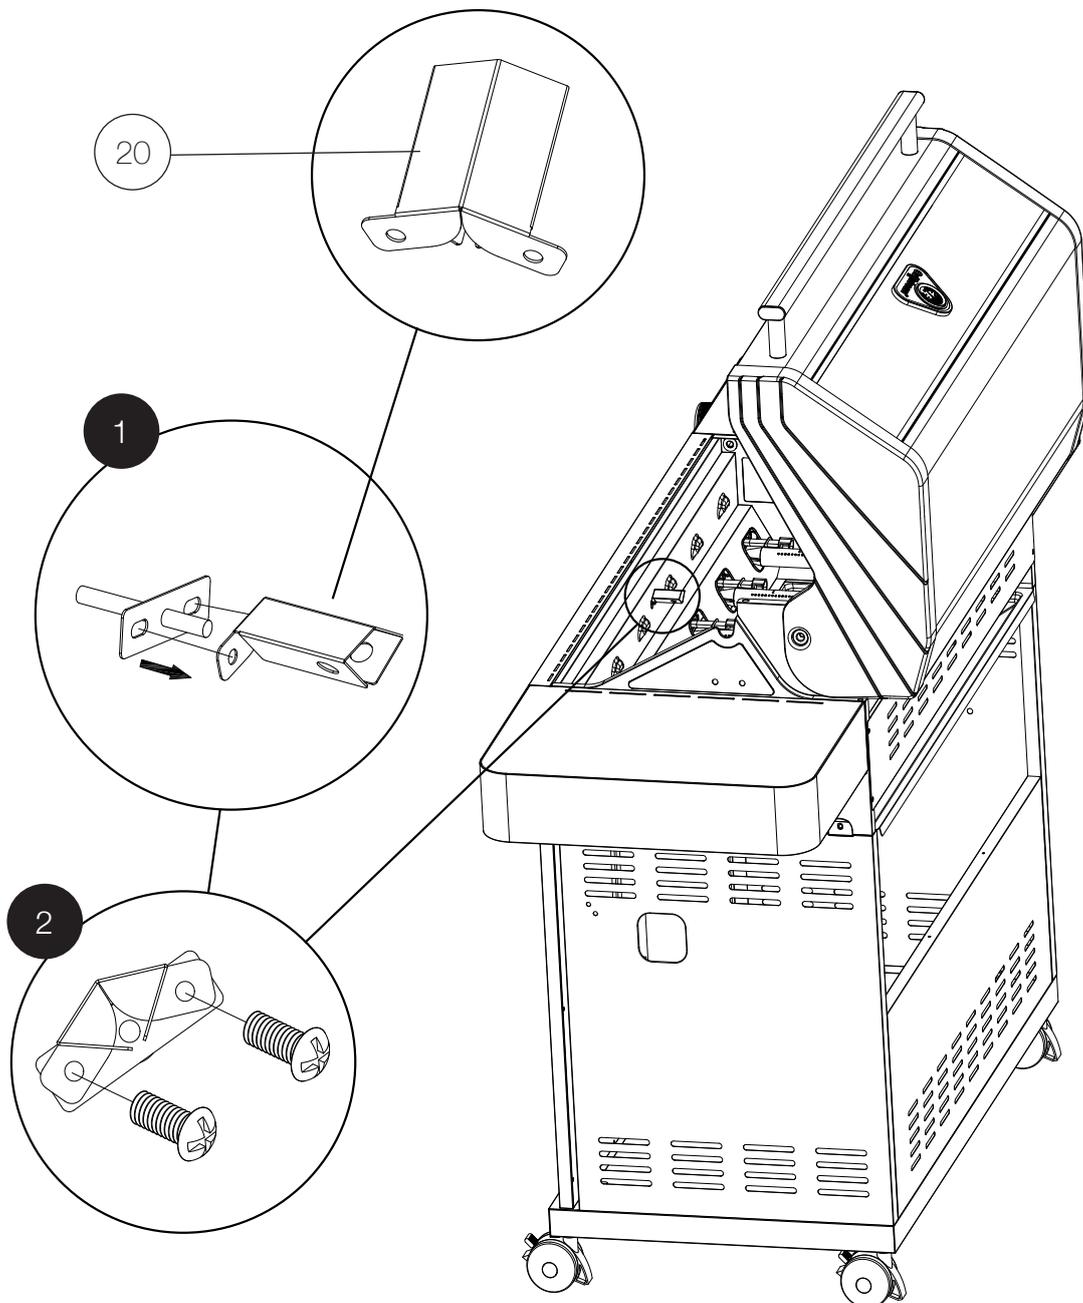


## STEP 18

Place Hybrid Flame Tamers (33) on locating shelves. Flame Tamers should sit directly above Tube Burners. Insert Fat Channel (32) into Cooking Frame by first sliding thin end through right-hand side of Cooking Frame and then slotting front lip in groove between Cooking Frame and Control Panel.

Place Grillstream Grills (38 & 39), Grillstream Gastro Grills (37) and Circular Griddle Plate (36) into Cooking Frame. Leg tabs from bottom Grillstream Grills and Grillstream Gastro Grills should rest on lip at back of Cooking Frame with the logo tab at the front. Top Grillstream Grills should sit directly on top of the bottom Grills.


The Circular Griddle Plate should rest on top of the upper Grillstream Gastro Grill above the cutout section. You can also swap out the Circular Griddle Plate for a variety of Grillstream Gastro Accessories including a Pizza Stone, Wok or Chicken Roaster (sold separately) for a varied cooking experience.

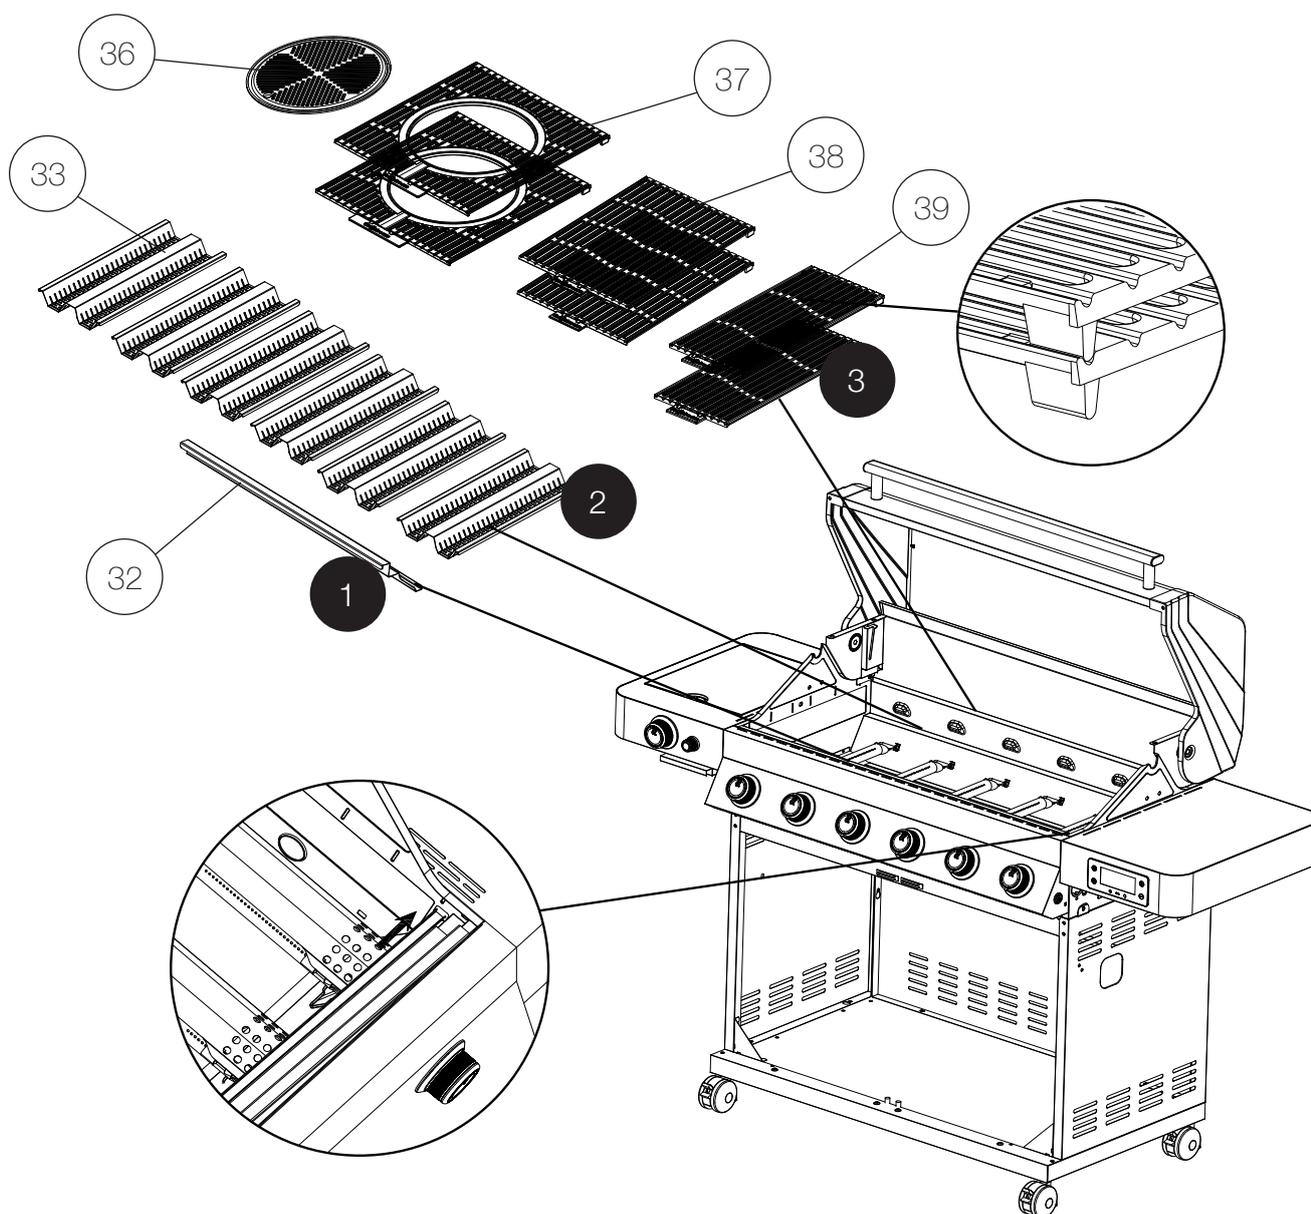

## || STEP 19

Insert back legs of Warming Rack (34) into channel on Warming Rack Clips.


Angle Warming Rack forwards and insert front legs into holes located on Cooking Frame (5). To operate, lift front legs out of holes in Cooking Frame and tilt Warming Rack upwards. Pull Warming Rack forwards slightly so back legs are in line with vertical track and slide downwards.

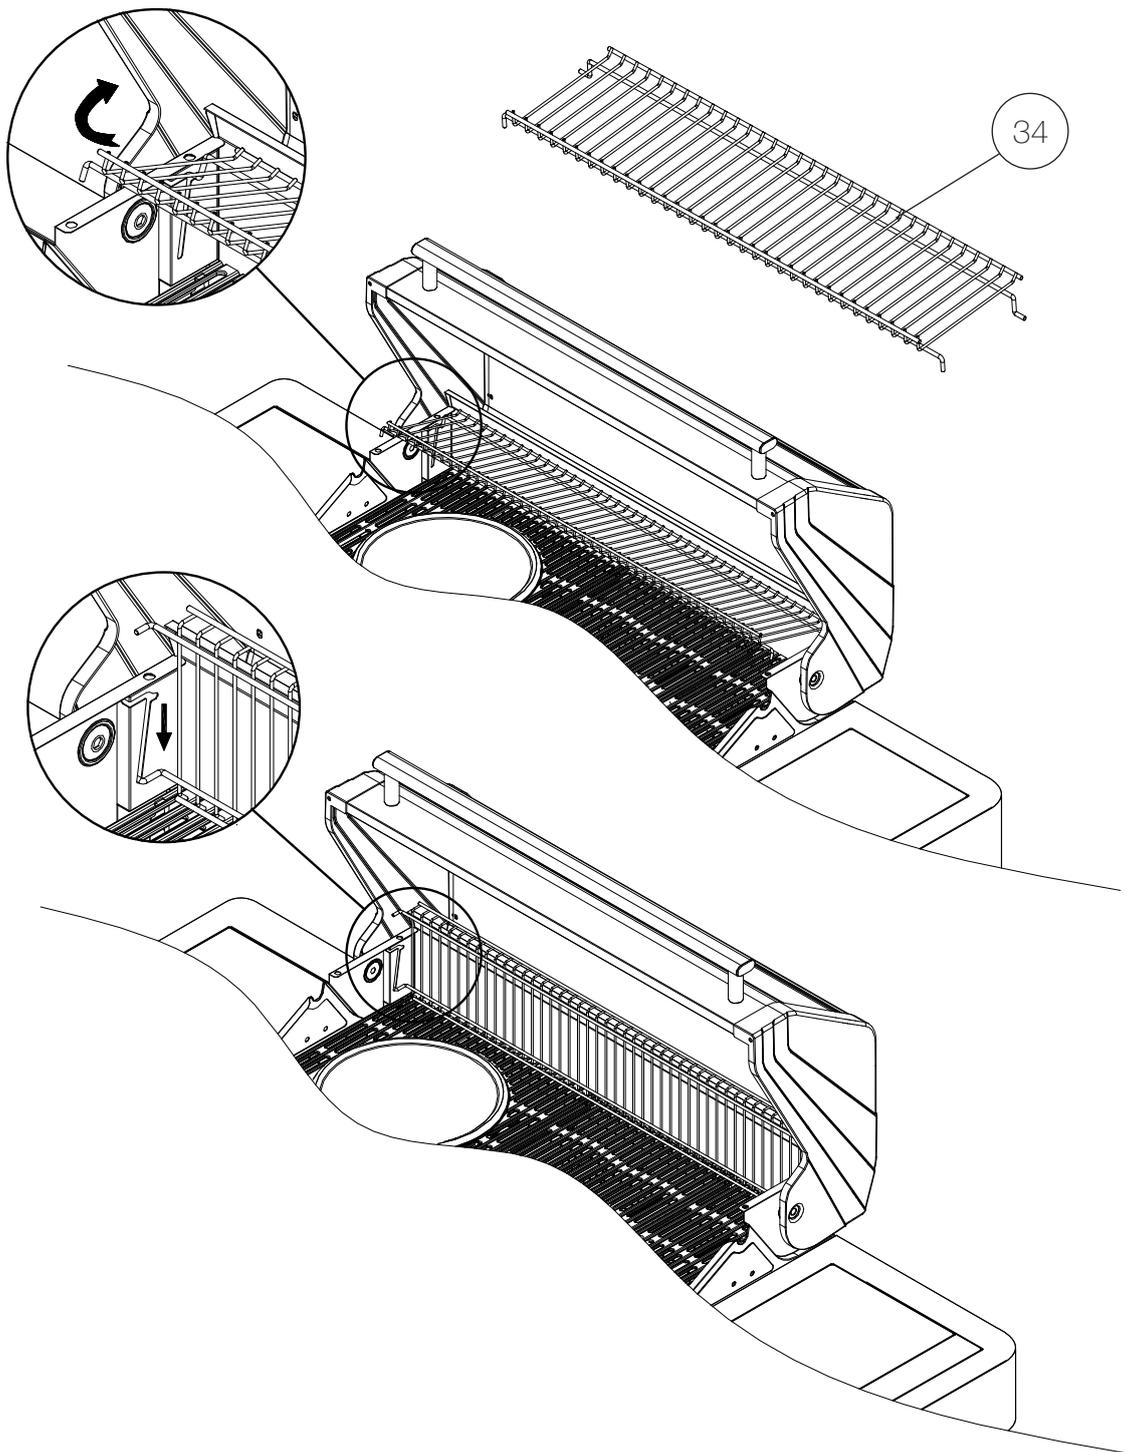

**|| STEP 20**


Connect both Battery Wires to the Battery Pack (31). The reverse of the Battery Pack is magnetic and should attach to Cabinet Side Panel - Right (9) in area shown. Insert 4 x AA Batteries (not supplied) into Battery Pack.

The On/Off switch for the LED Control Knob function is located to the right of the control panel. Use this to enable or disable the LED function. Note: The Control Knobs will light up then change colour individually when they are twisted to the on position to indicate which burners are active.

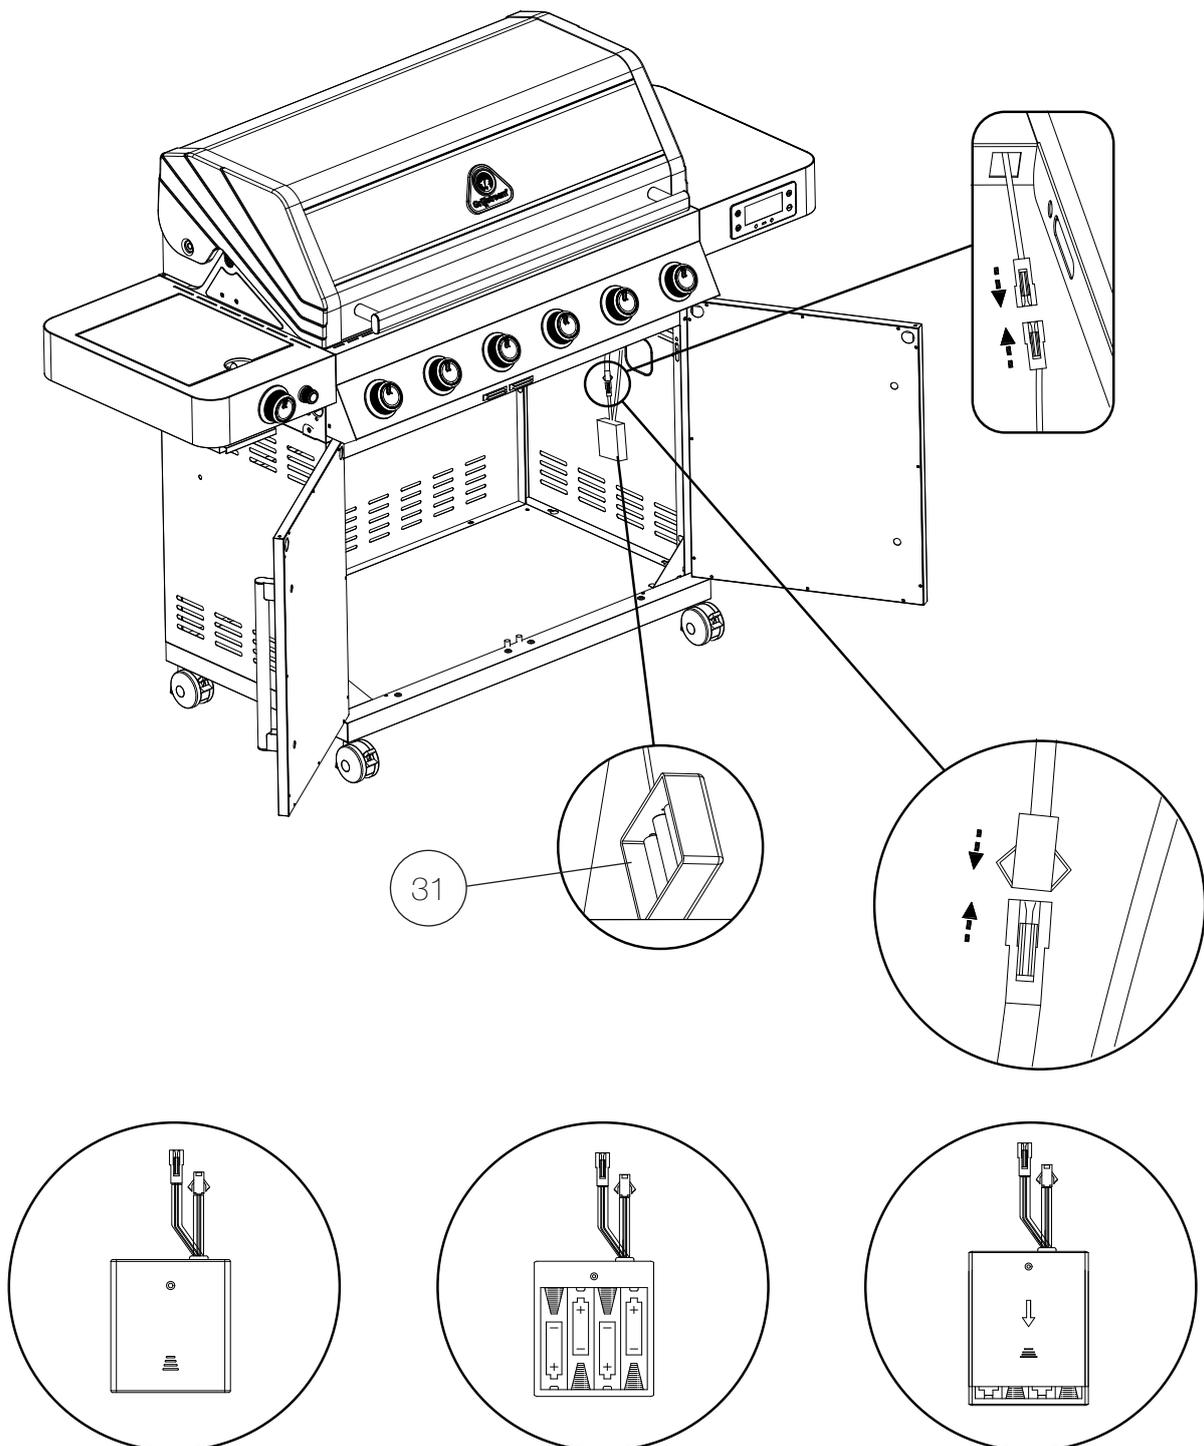

**|| STEP 21**


Unscrew bolt supplied with Tool Hook Rack (40). Hook the Tool Hook Rack over the ledge on underside of Side Shelf (13) and secure in place using the bolt you previously removed.

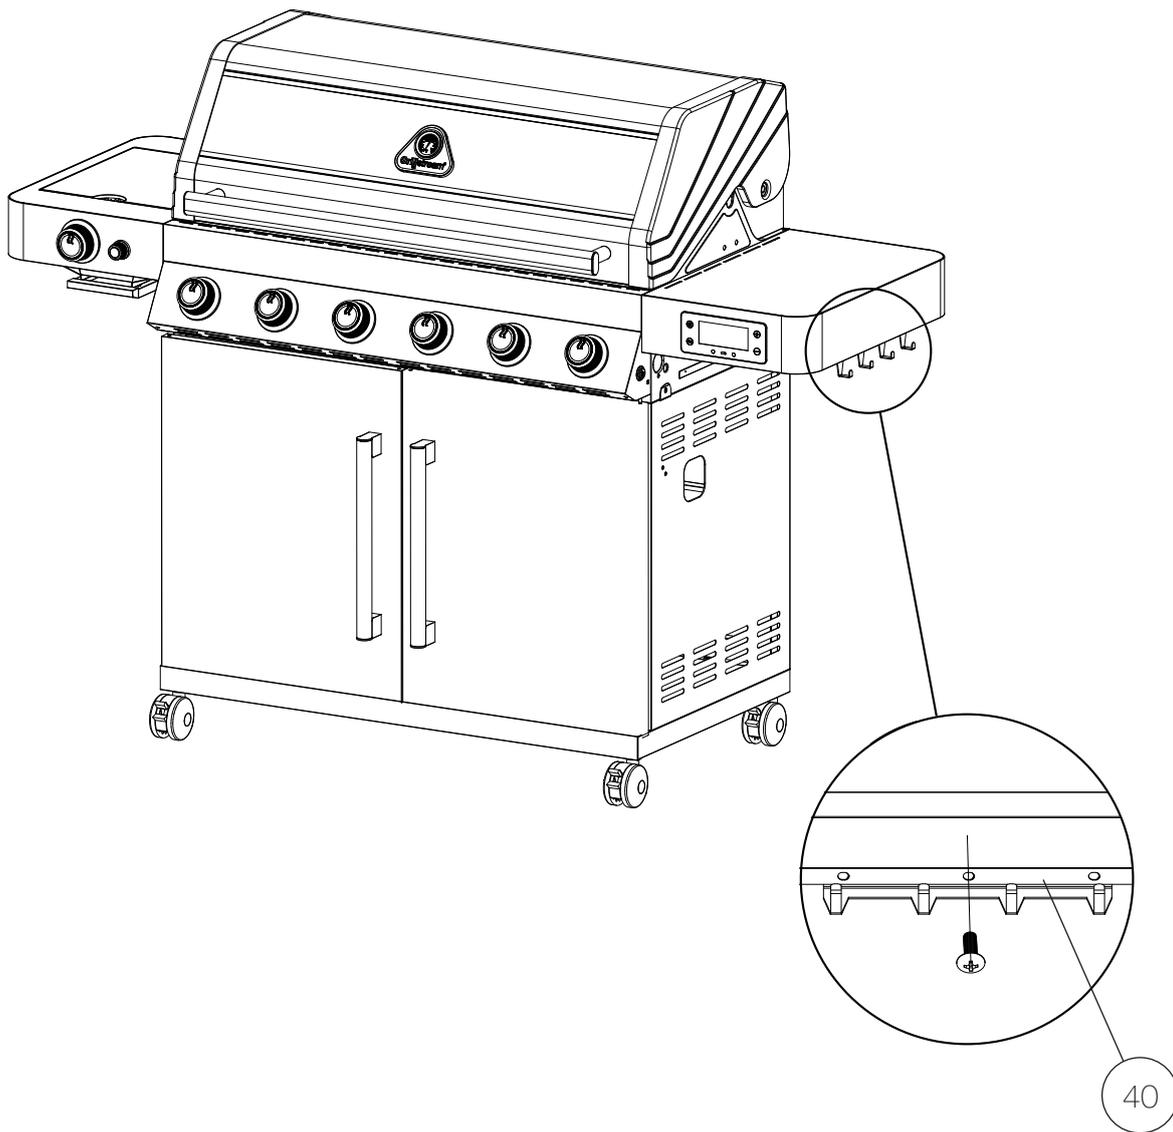

**|| STEP 22**

Attach Bottle Opener (29) through Cabinet Side Panel (8) using bolts and Bottle Opener Bracket (30) as shown.

Hook Grillstream Fat Cup (28) over holes in Cabinet Side Panel (9). This should be located directly below the spout of Fat Channel (32) to catch fat and meat juices channelled from the Grillstream system.

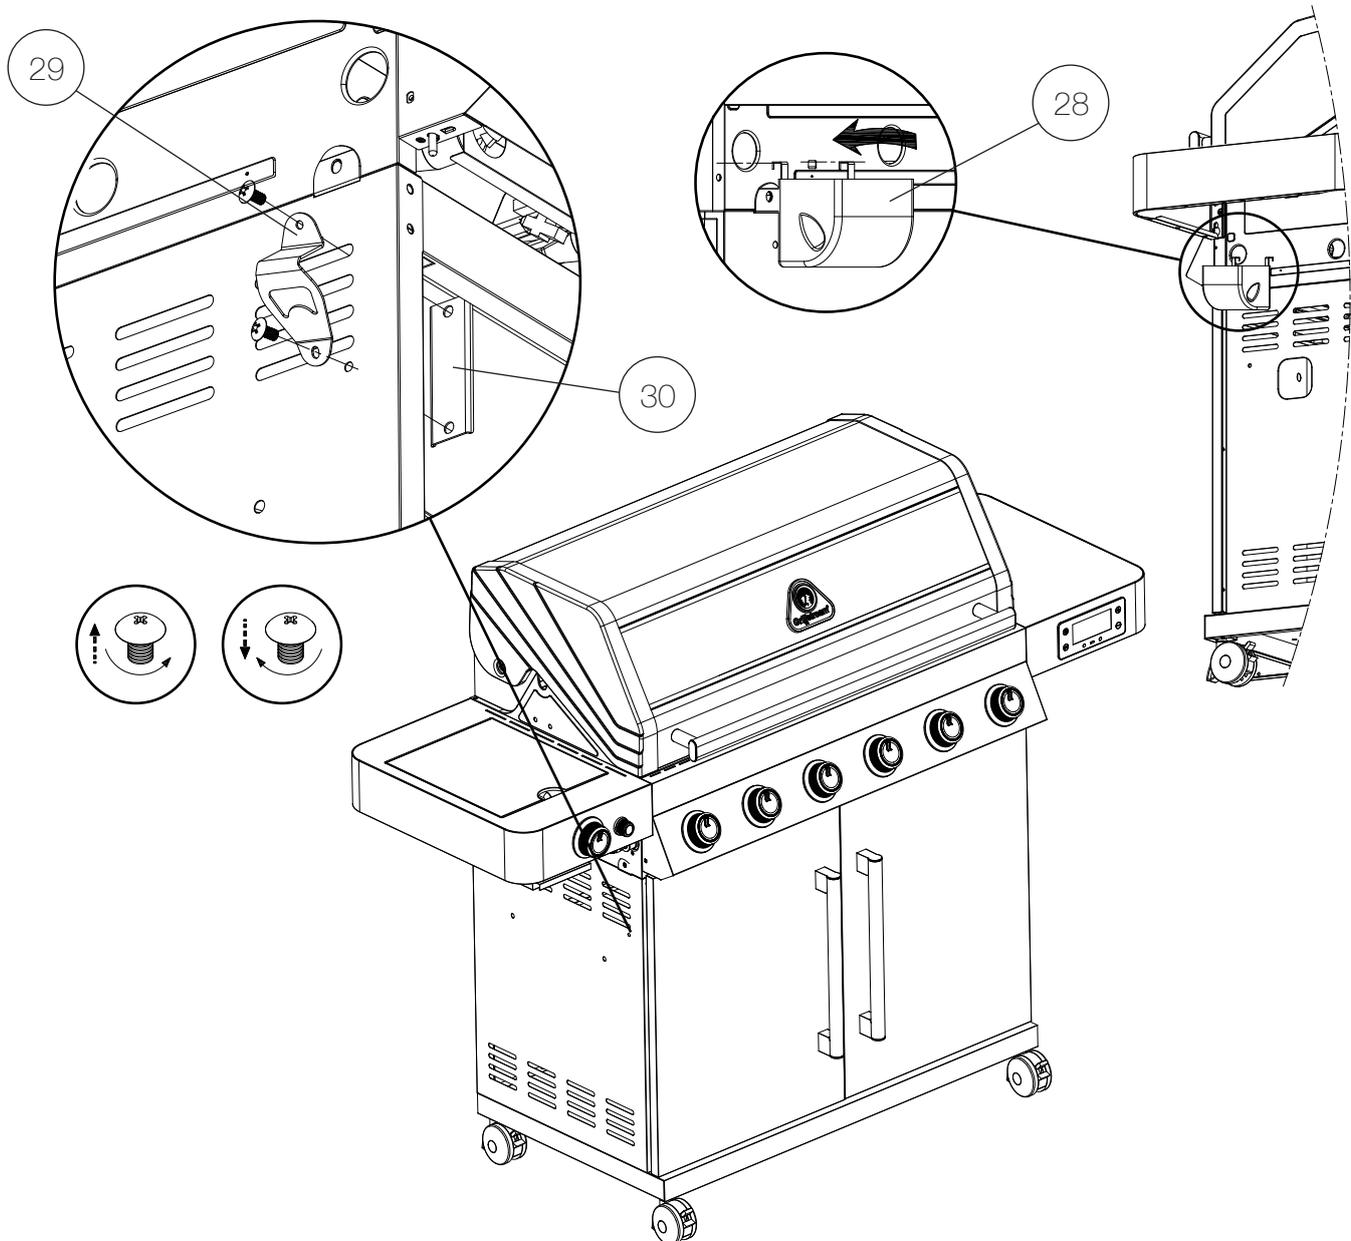


## || TESTING YOUR BBQ

**TESTING FOR LEAKS - DO THIS BEFORE USING YOUR BBQ.** Note - Do not test for gas leaks with an open flame. If you smell gas, turn off at the source.


Before first use, at the beginning of each new season, or whenever a gas cylinder is changed, you must check for gas leaks.

Do so by:


**1** Turn all gas valves on the BBQ to the off position

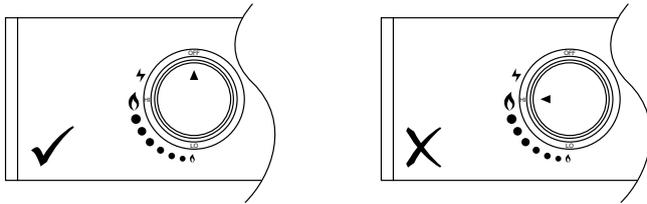


**2** Turn on the gas cylinder

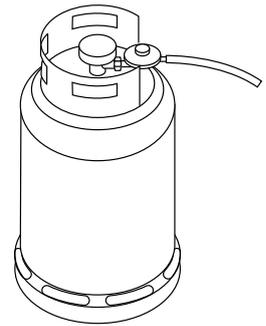


**3** Make a soap solution of one part liquid detergent and one part water

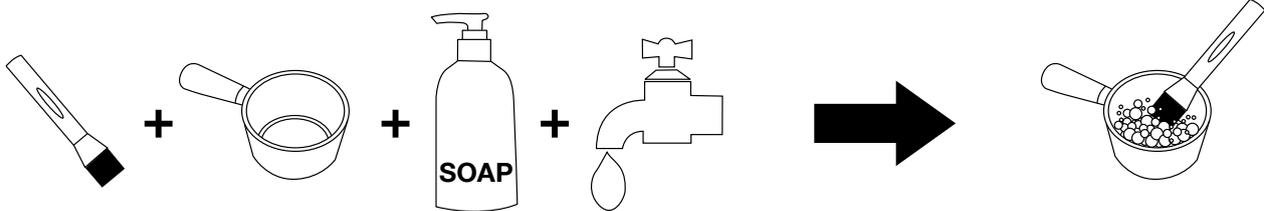

**4** Brush the soap solution over all gas connections

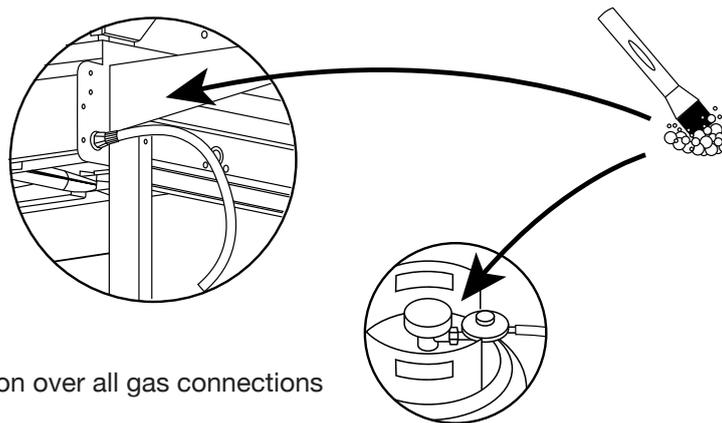

- 5**
- The presence of bubbles indicates a leak. Tighten or repair as necessary
  - Under no circumstances should a naked flame be used to check for leaks
  - If a gas odour is present and no leaks can be found, do not use the BBQ. Turn the gas off at the source, disconnect the hose and immediately contact your BBQ dealer or place of purchase for assistance

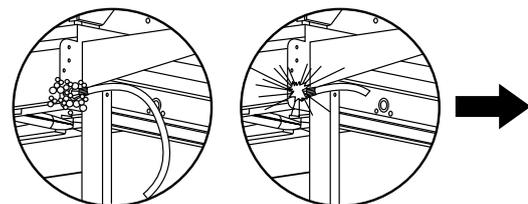

---

**PLEASE KEEP THESE INSTRUCTIONS FOR  
FUTURE REFERENCE**

---

Grillstream Barbecues  
Part of the LeisureGrow Group  
Dewmead Farm,  
New Inn Road,  
Hinxworth,  
Hertfordshire SG7 5HG,  
United Kingdom.  
Tel: +44 (0)1462 744500  
E-mail: [consumer@leisuregrow.com](mailto:consumer@leisuregrow.com)